


# ASSEMBLING BUFFER BODY WITH EXTRA SLOT

MORE THAN 800 BARREL BUFFER BODY ASSEMBLIES FOR THE M2 MACHINE GUN HAVE BEEN FIELDIED THAT HAVE A SLOT ON BOTH SIDES INSTEAD OF ON JUST ONE SIDE.


THE EXTRA SLOT DOESN'T HURT THE OPERATION OR SAFETY OF THE M2, BUT IT DOES MAKE IT POSSIBLE TO STICK THE BUFFER ASSEMBLY IN THE BUFFER BODY UPSIDE-DOWN.

THAT MAKES IT *IMPOSSIBLE* TO PUT ME BACK TOGETHER.

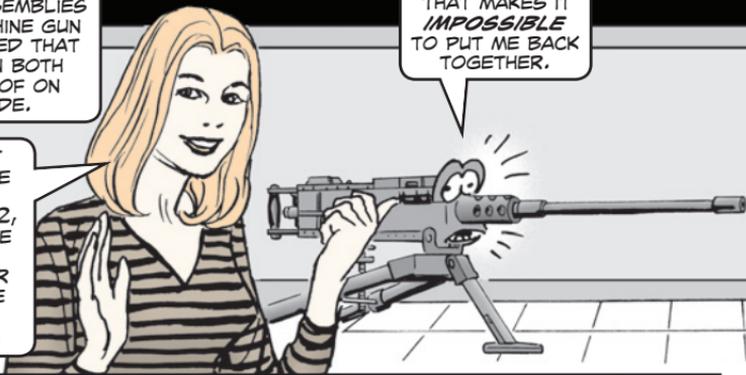


IF YOU HAVE A BUFFER BODY ASSEMBLY WITH AN EXTRA SLOT, HERE'S HOW TO CORRECTLY INSTALL THE BUFFER ASSEMBLY...


1. POSITION THE BUFFER BODY ASSEMBLY SO THE TWO LOCK DEPRESSORS ARE POINTED AWAY FROM YOU AND ARE ON TOP OF THE ASSEMBLY.

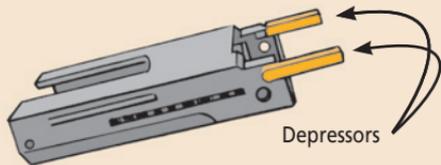

2. PUT THE BUFFER ASSEMBLY SPRING-FIRST IN THE BORE OF THE BUFFER BODY.

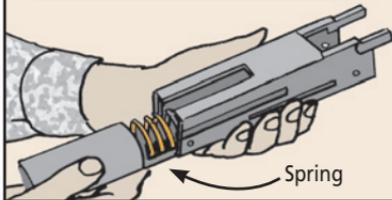

3. ALIGN THE BUFFER ASSEMBLY GUIDE SO IT ENGAGES THE SLOT ON THE RIGHT SIDE OF THE BUFFER BODY. SLIDE THE BUFFER ASSEMBLY INTO THE BUFFER BODY UNTIL THE GUIDE CONTACTS THE FAR END OF THE SLOT.

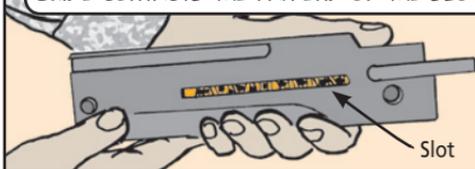

WHEN THE BUFFER ASSEMBLY IS INSTALLED RIGHT, THE HOOKED ENDS OF ITS ROD POINT UP.

