


MOUNT NSNs HAVE CHANGED

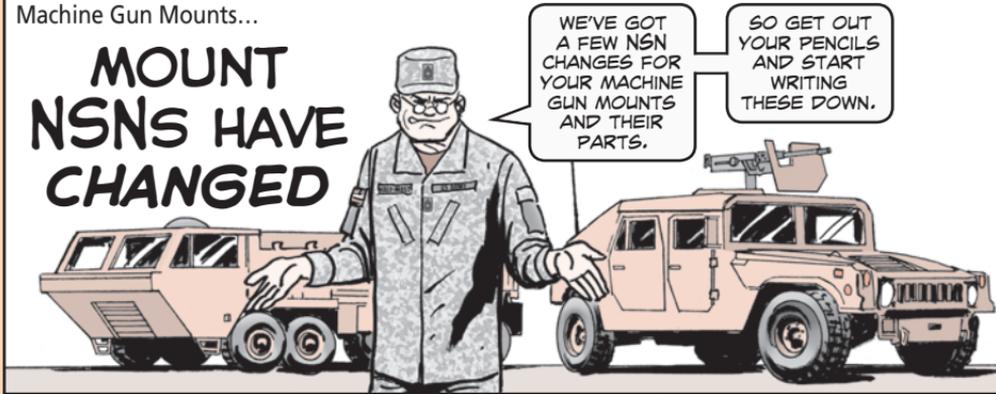


PS 621 (Aug 04) gave you practically everything you needed for mounting machine guns on your trucks. If you don't have a copy of the article, go to:


<https://www.logsa.army.mil/pub/psissuesA/621/621-14-21.pdf>

Since then, some of the NSNs have changed and some new items have been added. These changes have already been made to the online PS article. Make these changes to your own copy:


On Pages 14, 16, 18, and 20, add the M7 pedestal, NSN 1005-01-518-9037, to the items that can be used with the HMMWV.

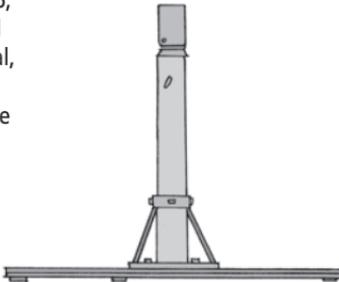


On Pages 14 and 15, change the NSN for the ammo adapter bracket assembly to 1005-01-468-0552. The link deflector is now part of the assembly.



On Pages 15, 17, 19, and 21, the NSN for the HEMTT mounting kit changes to 1005-01-519-2126 and the NSN for the PLS mounting kit changes to 1005-01-523-6549. The M66 mount ring is no longer part of the kits.

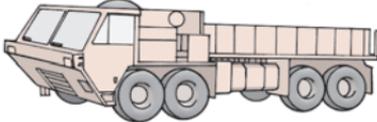

On Page 16, change the M122 machine gun tripod mount NSN to 1005-00-710-5599.

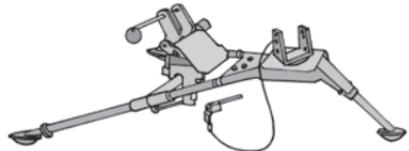

On Pages 18, 20, and 21, change MK93 MOD 1 to MK93 MOD 2, NSN 1010-01-502-7547.