


# GETTING READY FOR TOWING

ARE YOU  
READY FOR  
TOWING?

*YEAH! TAKE  
YOUR TIME AND  
HOOK ME UP  
RIGHT!*

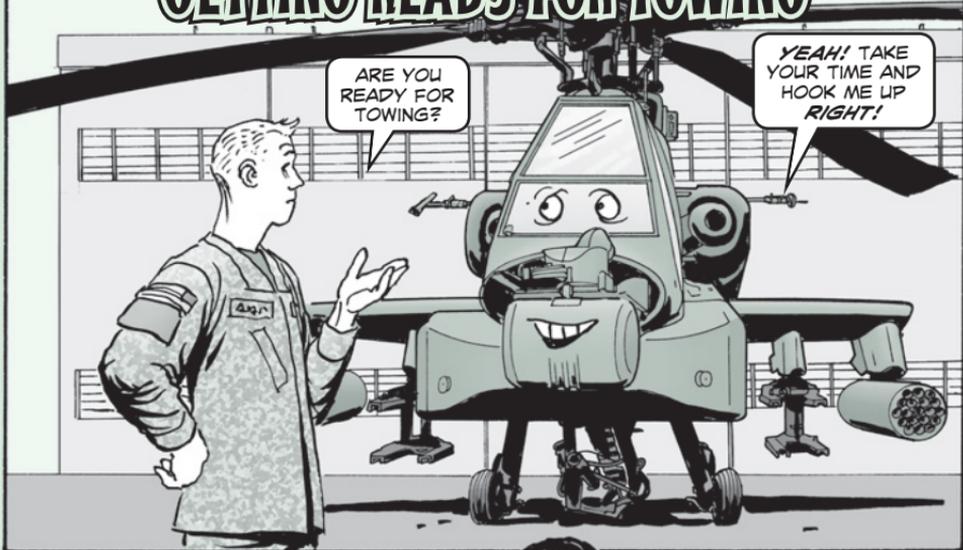

MECHANICS,  
DON'T GET IN  
A HURRY-UP  
MODE WHEN IT'S  
TIME TO TOW  
AN AH-64.



Too often the quick release pin either isn't in place before towing or gets missed when preparing your bird for the tow bar. If that happens, you'll shear the tail wheel lock actuator. Then your bird is NMC.

To avoid tearing your tail wheel apart, always press the lock handle down first and fully insert the quick release pin. Just be careful! The lock handle can pop back up before inserting the pin. Then hook up the tow bar and you're ready to tow your bird.

And don't forget the ground guides. They keep you from running into something.

Lock down  
lock handle  
and insert pin  
completely

