


PLS...


NEW RELAY  
GETS YOU  
OUT OF THE  
DOGHOUSE

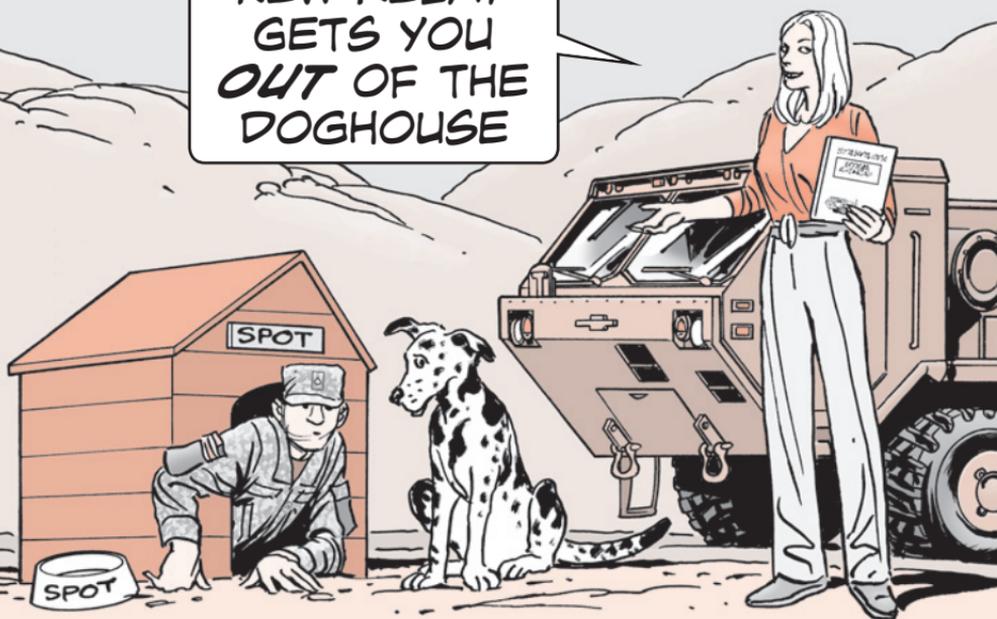

**I**n the past, the PLS truck has had problems with sticking magnetic relays. The solution for a stuck relay has been to bang on the doghouse. But now there's a new relay that should prevent sticking—getting you out of the doghouse and putting an end to the banging.

Order the new snap action contact type PLS relay kit using NSN 5975-01-552-0667. This kit allows units to retrofit older trucks. Plus, it brings all required parts (relays, wire, solderless connectors and shrink tubing) and installation instructions. The instructions include procedures to help you remove the existing magnetic switches and wire, rewire new relays, and mount new relays.

The PLS relay kit installation instructions are on AKO, so go ahead and eyeball them before you order the kit. You can find them by searching for PLS relay kit installation instructions on the AKO website: <https://www.us.army.mil>

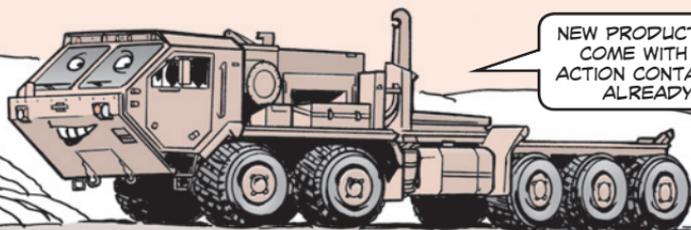

NEW PRODUCTION PLS TRUCKS  
COME WITH THE NEW SNAP  
ACTION CONTACT TYPE RELAYS  
ALREADY INSTALLED.