


DEPRESSURIZE HYDRAULIC SYSTEMS FIRST




MECHANICS, NEVER SERVICE OR REMOVE PRESSURIZED LINES ON CHINOOK HYDRAULIC SYSTEMS UNTIL THEY ARE **FULLY** DEPRESSURIZED.

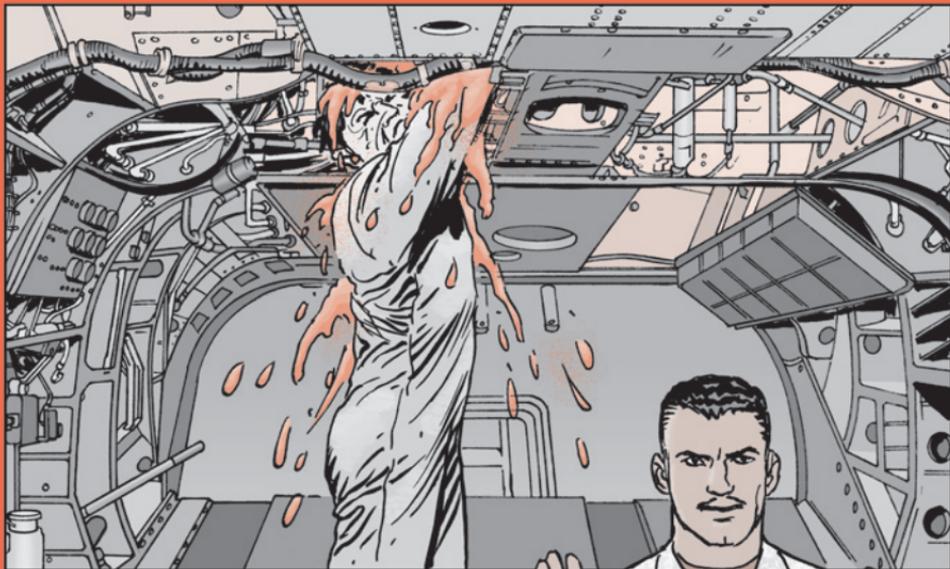

Servicing or removing lines on any system under pressure will create a mess you'll be cleaning for days.

For example, if you don't depressurize your bird's APU start system before trying to remove lines from the APU start accumulator, hydraulic fluid will gush out all over the bird. That's a clean-up nightmare you don't want. And it won't turn out good for you, either.

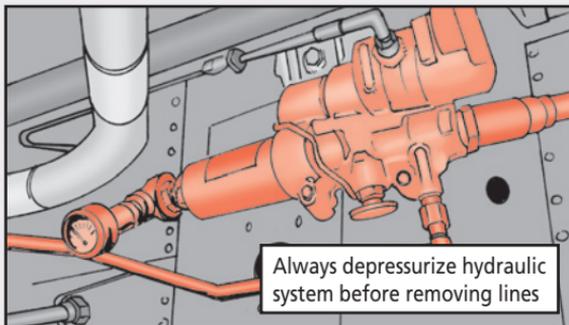

Always depressurize hydraulic system before removing lines

After depressurizing, do follow-on maintenance like the TM tells you.

After finishing the job, don't forget to re-pressurize your hydraulic systems.