

M113-Series FOV...

COME  
BACK!

I'M NOT  
FINISHED WITH  
YOU YET!

YOU SHOULD'A  
REMEMBERED TO  
USE CHOCK BLOCKS!

UP TO BEING  
READY


**M**echanics, when you remove the powerpack on an M113-series vehicle, you'll feel mighty foolish if the carrier goes rolling off across the motorpool.

Once you disconnect the final drives, that vehicle is free to go where gravity takes it. And a free-rolling vehicle is bad news for everybody and every thing that stands in its way!

Head off serious injury to others and damage to the vehicle by always chocking both tracks. Here's how:

- Make sure the vehicle is on a hard, level surface to lessen the chance of rolling. That also lowers the risk of damage to the hull and powerpack when you lift it out.
- Slide a block of wood or other suitable object between the track guides and roadwheels. Make sure the chock block extends the full width between **both** roadwheels.

Place chock block between these two roadwheels on both sides of track

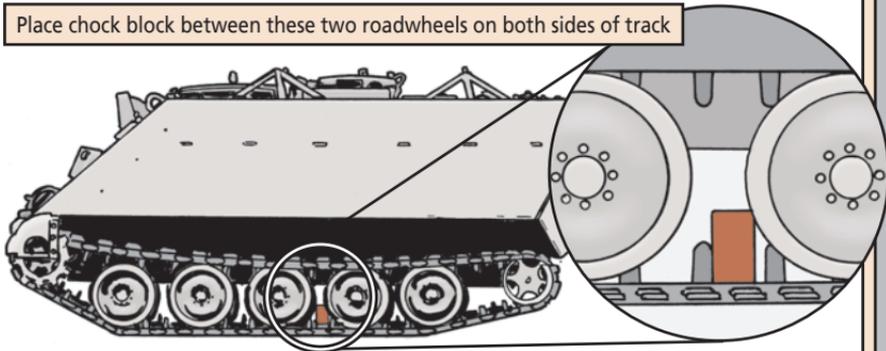

Just don't forget to remove the chock blocks once the powerpack is reinstalled. Otherwise, your next repair job will be to the tracks!