

HMMWVs...


West Coast Mirror



FOR A CLEAR VIEW, USE NSN 2540-01-436-1626 TO GET ME A "WEST COAST" MIRROR KIT.

The mirror in this kit is larger than the older-style side view mirror, and also has a convex, wide-angle view area that improves the driver's field of view.

Use riveter, NSN 5180-01-201-4978, from the vehicle's special tools, to install the blind rivnuts that come with the kit. They provide the threaded holes for the bolts that hold the mirrors on the truck.

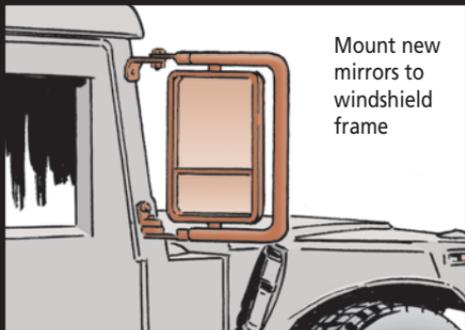

Mount new mirrors to windshield frame

M872-Series Semitrailers...

PLANS FOR STORAGE BOXES

Need new storage boxes or compartments for your M872-series semitrailer? Well, you've probably noticed that the vehicle's parts manual is no help, so listen up.

The boxes are not available through the supply system. They must be fabricated at your support shop.

TO GET PLANS FOR THE BOXES AND COMPARTMENTS, CONTACT AT TACOM'S TRAILERS & TACTICAL FLEET ASSESSMENT GROUP.

Call: DSN 786-5281
Comm (586) 574-5281
Email:

[@us.army.mil](mailto:us.army.mil)

Or, write:
USA TACOM
ATTN: AMSTA-LC-CHT
6501 E 11 Mile Road
Warren, MI 48397-5000

