


Trailer
Hookups...

SAVE THE BRAKES


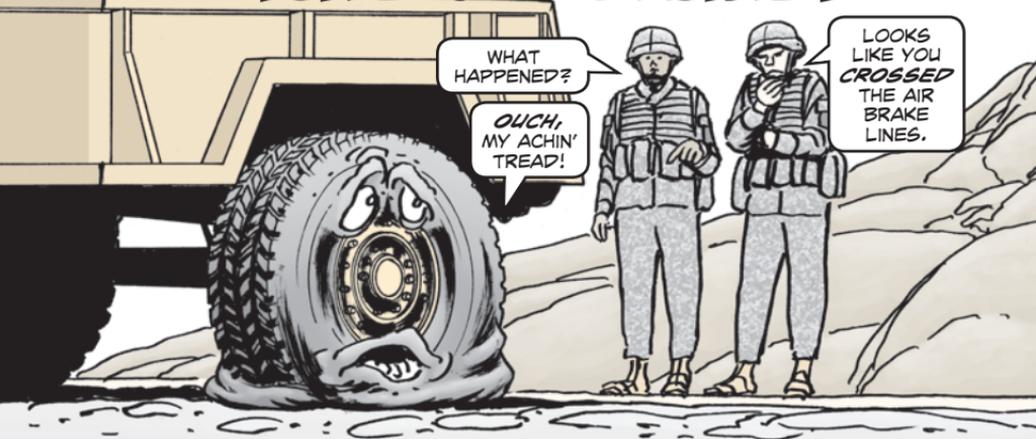


"CAUTION" is the word to keep in mind when you hook up the brake air hoses from a trailer to your 2½- or 5-ton truck. If you cross the air lines, the trailer brakes will lock up, burn out or ruin the tires.

So-o-o-o, make sure your trailer's hooked up right!

It's not hard to do. Just locate the **SERVICE** and **EMERGENCY** air couplings. Make sure you use the TM to verify where they are on your trailer.

It's a good idea to color-code the trailer air hose connectors and the truck's gladhand couplings. A dab of blue paint on the **SERVICE** connectors and red on the **EMERGENCY** pair will keep things straight.

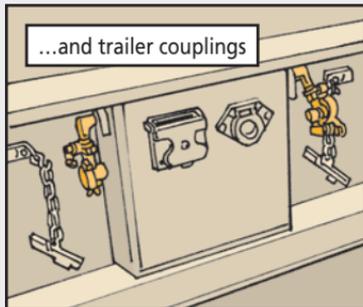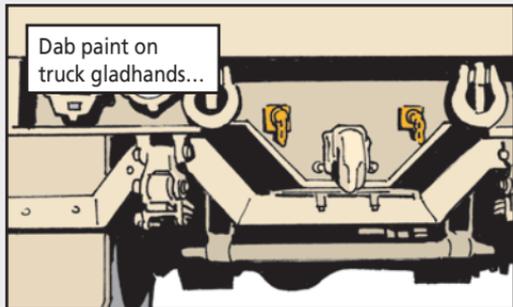

YOU CAN ALSO ADD A **SERVICE** OR **EMERGENCY** ID PLATE TO YOUR TRUCK'S GLADHANDS...



ID Plate	2½-ton truck NSN 9905-00-	5-ton truck NSN 9905-00-999-
SERVICE	740-9721	7370
EMERGENCY	774-4284	7369