



**Shut down right.** It's just as important to shut down the JBPDS correctly as it is for the P3I. If you skip shutdown steps, you end up with clogged lines and sticking valves.

If you're not going to be using JBPDS for a while, put the stack covers on. They keep water from filling up the internal collector concentrator, which can cause a major hazard. After a storm, make sure the covers haven't blown off.

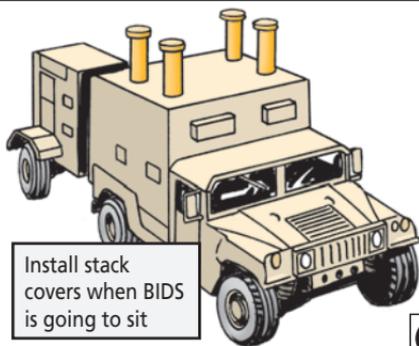

Install stack covers when BIDS is going to sit

P.S.  
END

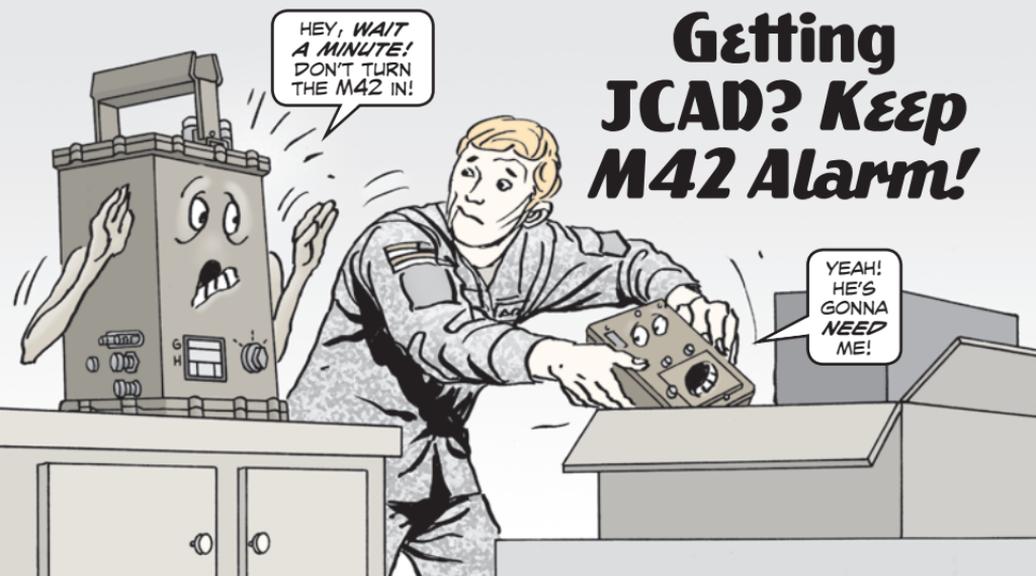

**W**hen your unit receives the new JCAD (joint chemical agent detector), NSN 6665-01-552-2704, you should turn in the M22 ACADA (alarm, chemical agent, automatic) or M43A1 chemical agent detector.

But don't turn in the M42 alarm, NSN 6665-00-859-2215. You will need that to use with the JCAD. Turn in the M42 only if it's excess. For more info, see Supply Advisory Message 09-01-107 or -016:

<https://aeps2.ria.army.mil/commodity/sam/tacom-sbc/sam-09-01-107.html>

If you have questions, contact TACOM-Rock Island's Megan Kirby at DSN 793-3725, (309) 782-3725, or email [megan.m.kirby@us.army.mil](mailto:megan.m.kirby@us.army.mil)