
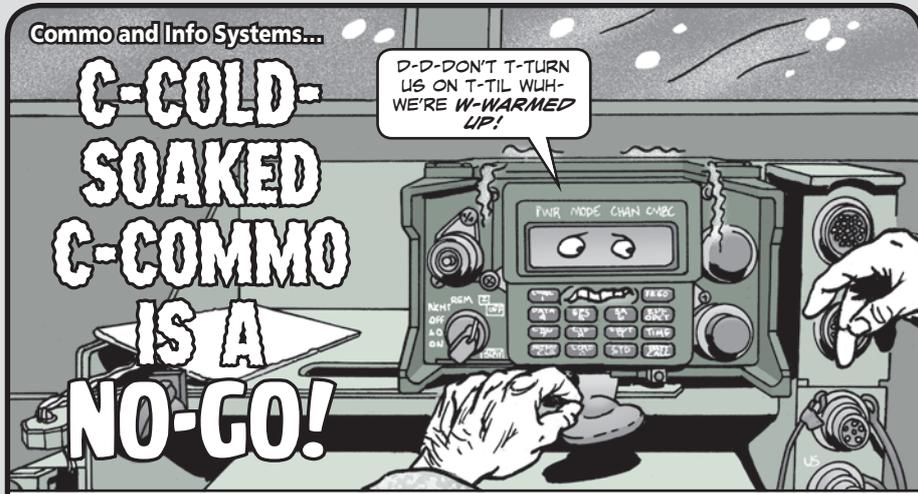
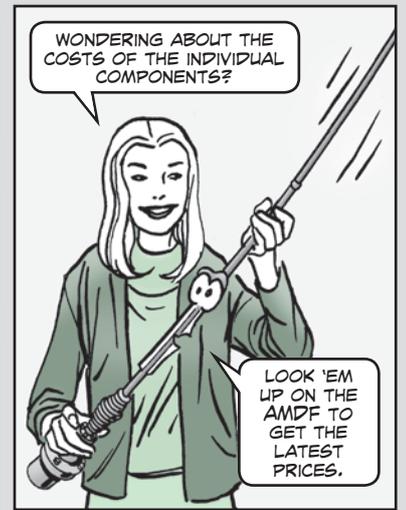
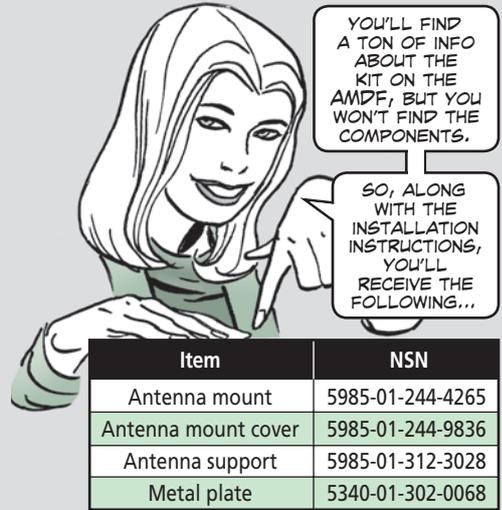
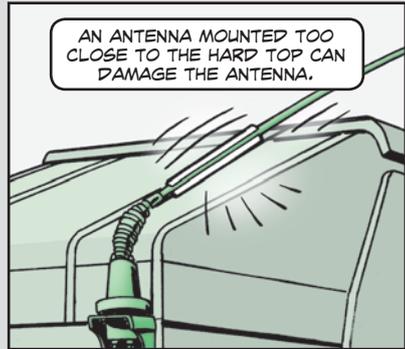
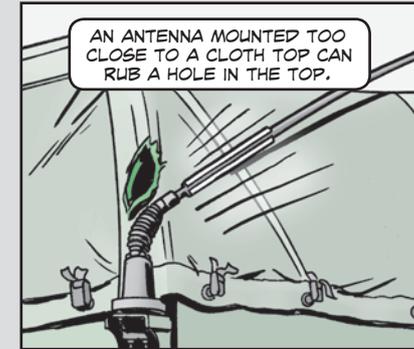


Offset Kit Info

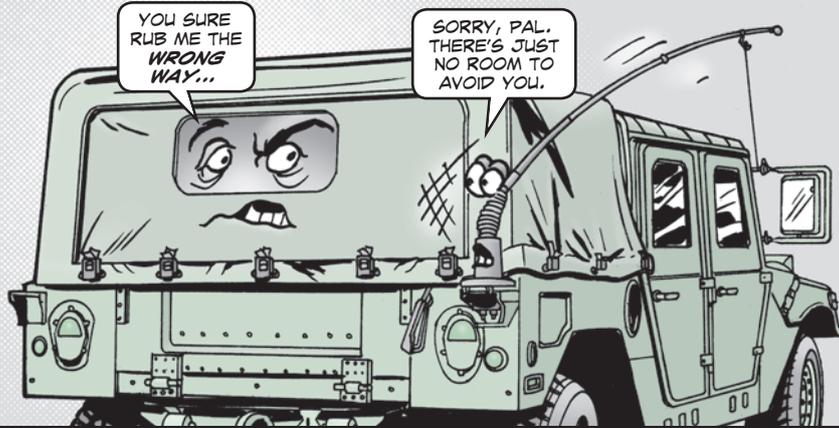

Commo and info systems left in cold-soaked vehicles must be allowed to warm up by surrounding warm air before they are turned on.

Computers and displays are not designed to operate at extremely cold temperatures. They might work, but the product will be diminished and it may be inaccurate.

So, warm the equipment environment before you switch on the equipment. If you know you can't do that, remove the equipment from a vehicle that might be cold-soaked overnight. Check the equipment TM for "operations under unusual conditions."