


MRAP  
M-ATVs...

# FLOOR MAT MISHAP

DO NOT REMOVE THE M-ATVS BLAST-ABSORBING REAR FLOOR MATS.

SOME PASSENGERS DISCARD THE MATS WHILE STOWING UNSECURED EQUIPMENT UNDER THE VEHICLE'S BLAST-ABSORBING SEATS.

WITH THE MATS REMOVED, THERE'S A GREATER RISK OF SERIOUS INJURY IF THE VEHICLE IS HIT BY AN IED AND LOOSE EQUIPMENT GETS TOSSED ABOUT DURING A ROLLOVER.

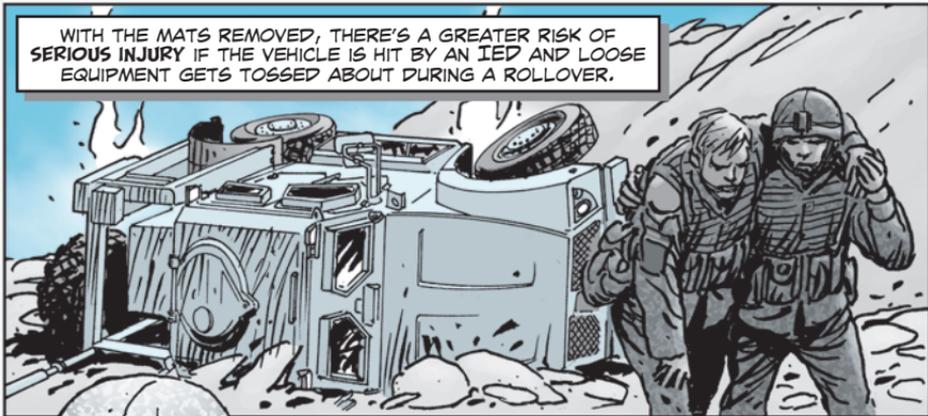

THE M-ATV IS NOT NMC IF IT'S MISSING THE MATS...BUT WHY INCREASE YOUR RISK OF INJURY?

REPLACE A MISSING REAR FLOOR MAT (LEFT-SIDE) WITH NSN 2540-01-577-0620.

USE NSN 2540-01-577-0627 TO REPLACE THE REAR RIGHT-SIDE MAT.

WONDERING WHAT TO DO WITH THAT UNSECURED EQUIPMENT?

TAKE A LOOK AT WP 0039 IN TM 9-2355-335-10 FOR THE LOWDOWN ON HOW TO PROPERLY SECURE AND STOW EQUIPMENT INSIDE THE M-ATV.

