


Tools Added to Forward Repair System

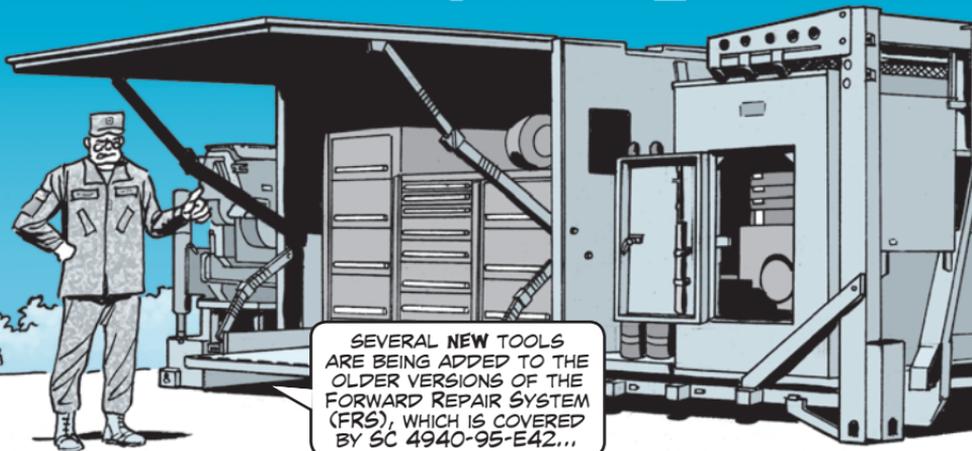

- Crowsfeet set, 1 each, PN 3395COFM (for FRS's with serial numbers 1587-3 and below)
- KP174 airbags, 2 each, PN 22-888200 (serial numbers 1504-3 and below)
- Multimeter temperature leads, 1 each, PN GK13M (serial numbers 1504-3 and below)
- Air hose, 1 each, 70 feet long, PN 3870RWA (serial numbers 1368-3 and below)
- Blowgun, 1 each, PN 159 (serial numbers 1368-3 and below)
- Heat gun, 1 each, PN PH1100 (serial numbers 1999-3 and below)

If your FRS has the above serial numbers, order the new tools free online:

<https://pmskot.army.mil>

Here's how:

- 1) Read and acknowledge the statement and click Continue
- 2) Click on Tool Replacement/Warranty
- 3) Click on Click Here
- 4) Click on Retrofit
- 5) Fill in all information, including DODAAC
- 6) Select FRS from SKO list
- 7) Enter the serial number of your FRS (don't add -3 or -R to the serial number)
- 8) Select the appropriate retrofit tools
- 9) Click Continue
- 10) Check order for errors
- 11) Click Process Order

You should receive the tools within 7-10 business days.



IF YOU HAVE QUESTIONS, CONTACT TACOM'S BRIAN EGLI AT DSN 786-7270, (536) 282-7270, OR EMAIL: brian.j.egli.civ@mail.mil