



CABLE CARE CAUTION


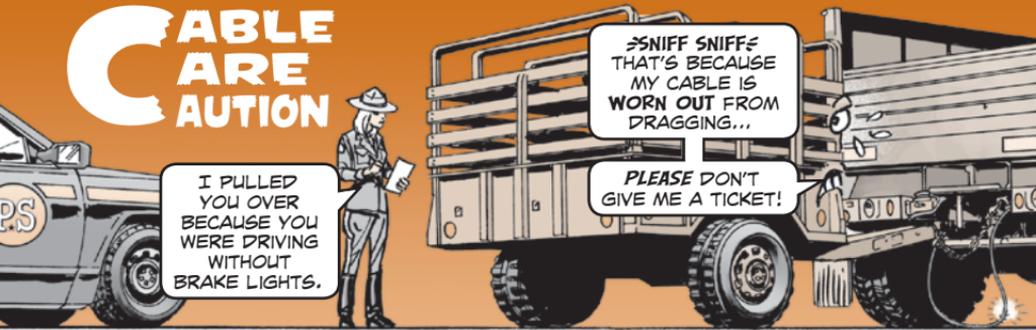


Before Connecting

Before installing cables, take a close look at the connectors and receptacles for dirt and corrosion. Loose dirt can usually be blown out with the help of an air hose.

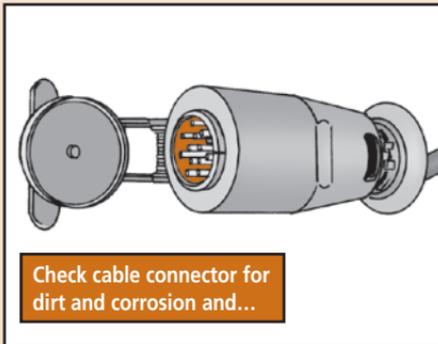

Stubborn dirt can be a little tougher. Try clipping off all but about 1/2 inch of the bristles on an acid swabbing brush, NSN 7920-00-514-2417. The shorter bristles make them stiff enough to brush dirt out of the connector and around the outside of the receptacle.

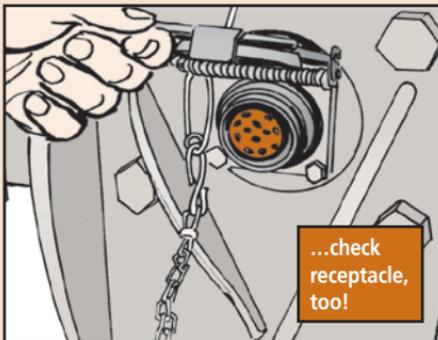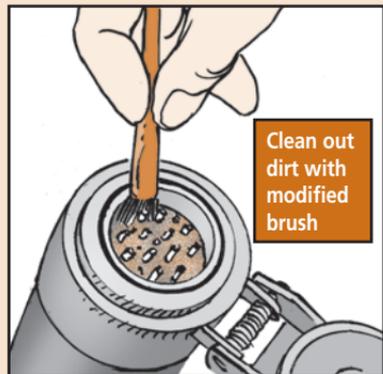

To remove corrosion, try spraying a light coat of corrosion preventive compound, NSN 8030-00-546-8637, and scrubbing with that short-bristled acid swabbing brush. The compound also displaces water, which should help prevent further corrosion down the road.