


# FLOOR MAT MISHAP



THAT FLOOR MAT  
SAVED MY LIFE!

SOLDIERS,  
**DO NOT**  
REMOVE  
THE M-ATVS  
BLAST-  
ABSORBING  
REAR FLOOR  
MATS!  
THEY COULD  
BE THE  
**DIFFERENCE**  
BETWEEN  
LIFE AND  
DEATH.

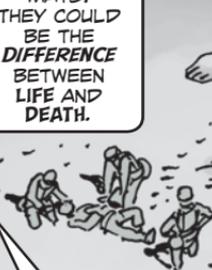


SOME PASSENGERS DISCARD THE  
MATS WHILE STOWING UNSECURED  
EQUIPMENT UNDER THE VEHICLE'S  
BLAST-ABSORBING SEATS.


WITH THE MATS REMOVED, THERE'S A **GREATER**  
**RISK** OF SERIOUS INJURY IF THE VEHICLE IS  
HIT BY AN IED AND LOOSE EQUIPMENT GETS  
TOSSED ABOUT DURING A ROLLOVER.

The M-ATV is not NMC if it's missing the mats—but why increase your risk of injury? Replace a missing rear floor mat (left-side) with NSN 2540-01-577-0620. Use NSN 2540-01-577-0627 to replace the rear right-side mat.

Driver's floor mat NSN 2540-01-577-0620

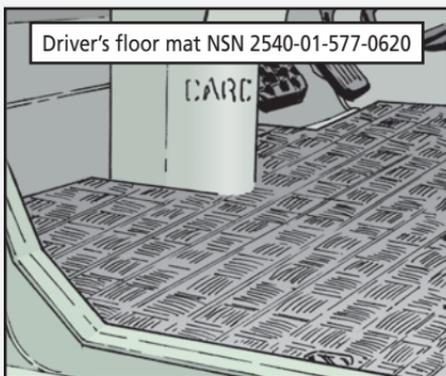

Passenger floor mat NSN 2540-01-577-0627

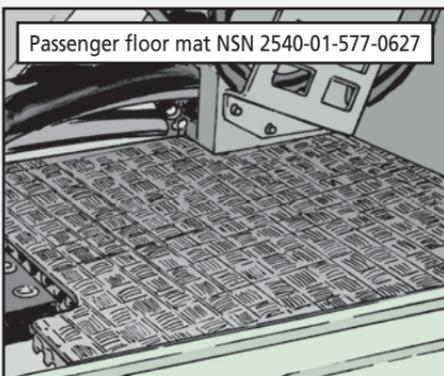

Wondering what to do with that unsecured equipment? Take a look at WP 0039 in TM 9-2355-335-10 for the lowdown on how to properly secure and stow equipment inside the M-ATV.