
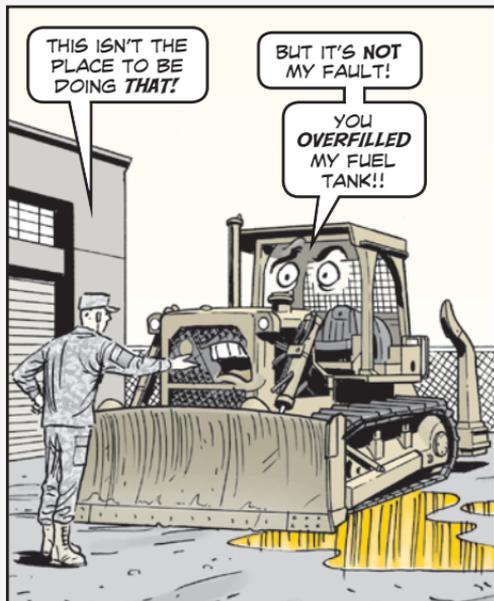


Fuel Line Reminder

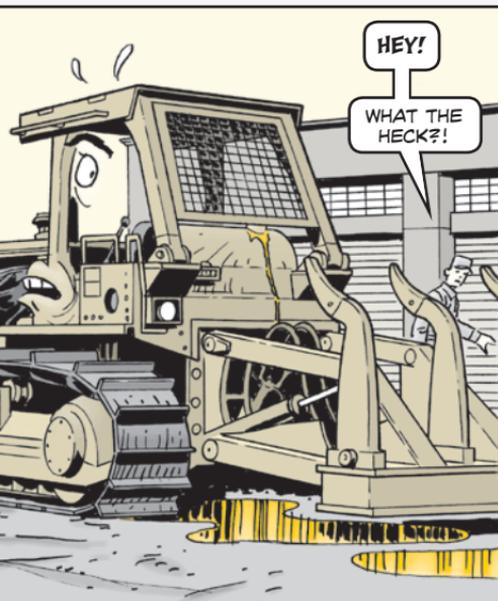

Your dozer came back from the paint shop looking like new.

But before you hop in the cab for the day's run, eyeball the back of the fuel tank. Make sure there's a stenciled "fill line" on the tank. It's a quick reminder not to overfill the tank.

When a tank is filled to the brim, diesel fuel that spills causes fumes in the cab area. Enough fumes will leave you lightheaded and nauseated.

If the paint line was painted over, have your mechanic use black CARC paint to stencil a new fill line at the bottom of the filler neck—about 3 inches below the top of the fuel tank.

Below the fill line, stencil "CAUTION—DO NOT FILL ABOVE THIS LINE TO ALLOW FOR EXPANSION" in 3-in letters. The stencils are part of the Standard Automotive Tool Set.

