

Stryker...


**COVER
ME UP
WHEN IT'S
WASH
TIME!**



Washing your Stryker without first installing the environmental cover could lead to some big problems. Not using the cover means water can get into the engine air intake and exhaust, which could blow the pack.

So before you grab the hose, be sure to grab the environmental cover first and secure it in place. Also, don't forget to install the heater exhaust cover, NSN 2590-20-000-0256. It's part of your Stryker's components of end item (COEI).

Don't wash Stryker without environmental cover in place

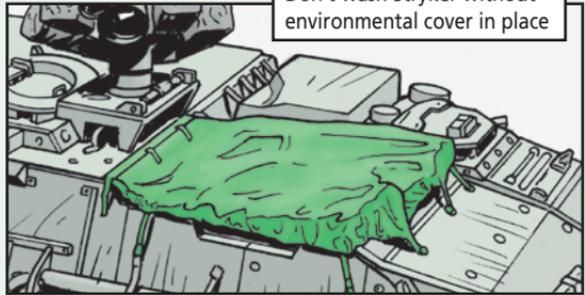

M109A6 Paladin...

EASY FIX FOR RIFLE BRACKET INTERFERENCE

Be sure to check the shafts for your M109A6 Paladin's M16 rifle/M4 carbine brackets, crewmen.

MWO 9-2350-314-30-5 replaced the shafts for those brackets. But some of the shaft nuts were screwed down too far. The nut should be flush with the shaft to prevent interference with the Excalibur rounds on their racks.

Check the shafts now. If you find any that aren't flush with the nut, adjust the nut until they are.

Ensure ends of shafts are flush with face of nuts

