


PLS...

# GET FLAT RACK DECKED OUT

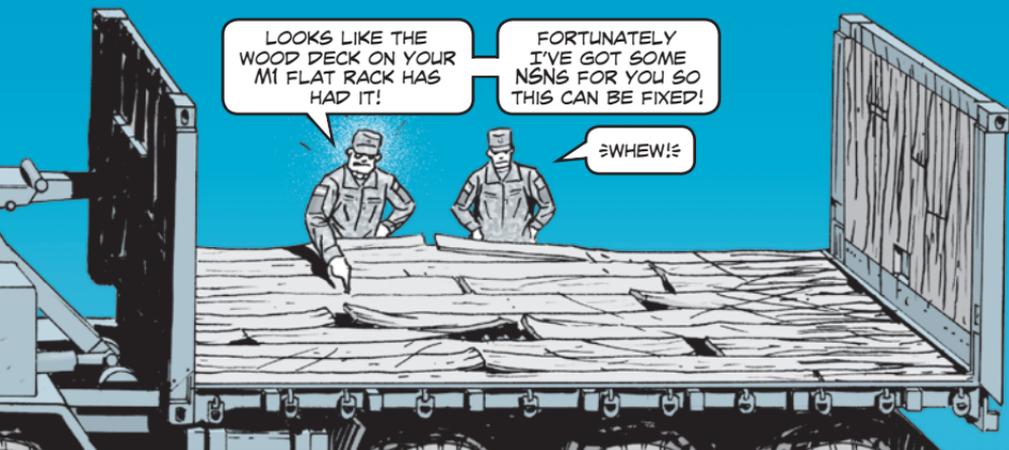

**N**eed to replace the decking on the M1 flat rack for your PLS? Wood decking kit, NSN 2510-01-582-5403, fits the bill. It replaces NSN 2510-01-582-5398, which is no longer available.

The kit actually contains two sub-kits: apitong wood, NSN 2510-01-582-5408, and plywood, NSN 2510-01-582-5396. Apitong is stronger and more durable than most other woods you can use. It resists rotting and ultraviolet rays, repels water and requires little maintenance.

The boards in these kits are not cut to fit or pre-drilled, though. That means you'll need a carbide saw blade and carbide-tipped drill bits to work with the apitong wood.

Attaching hardware is also not included, so you'll need to order it separately from Figs 3012 and 3015 in TM 9-2320-319-13&P.

If you need to replace the flat rack's rear folding wall, order the wood kit that comes with NSN 2510-01-582-5515.

