


ADD CONVEX SAFETY MIRRORS

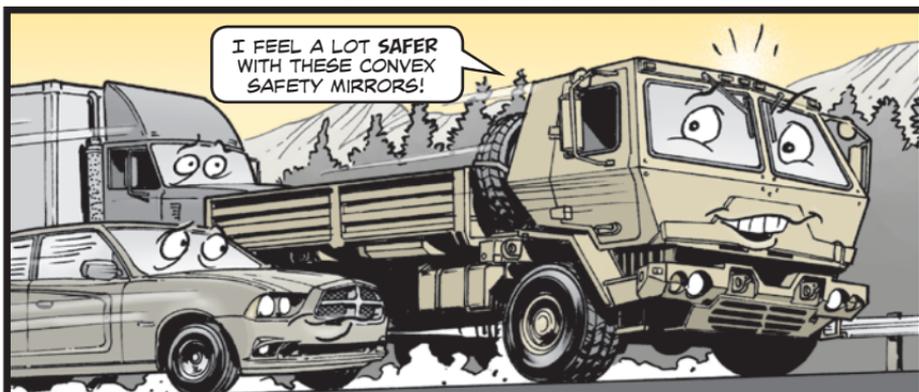

Drivers, get a better view of what's alongside your FMTV by having your mechanic install a convex safety mirror, NSN 9340-01-478-3889, on your truck's side view mirror mounts. That NSN brings the mirror, brackets and all the hardware you need.

For replacement parts, check out this chart:

Item	NSN
Bracket (passenger)	5340-01-479-0602
Bracket (driver)	5340-01-483-1528
Flat washer	5310-00-809-4058
Self-locking nut	5310-00-877-5796


M1077
PLS
Flatrack...

GET STOWAGE BOXES FIXED OR REPLACED

Are the stowage boxes on your M1077 flatracks damaged or missing? You can't order a replacement box and TM 9-2320-364-14&P doesn't have the procedures for repairing them.

But you still need the boxes for secure, waterproof storage of tiedown straps. So what to do?

Your local support can make or repair the boxes using plans that are available by request. Just send a quick email to:

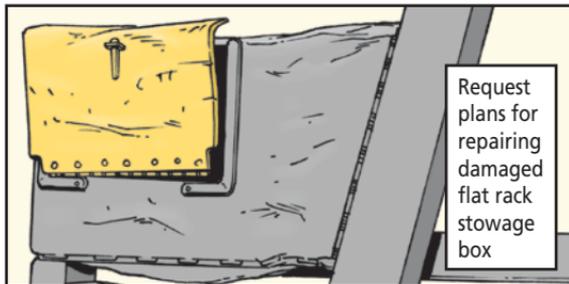

usarmy.detroit.tacom.mbx.ilsc-pls2@mail.mil

Or drop a line to Half-Mast at:

half.mast@us.army.mil or usarmy.redstone.logsa.mbx.psmag@mail.mil