


Trailer Hookups...



COLOR-CODING SAVES BRAKES!

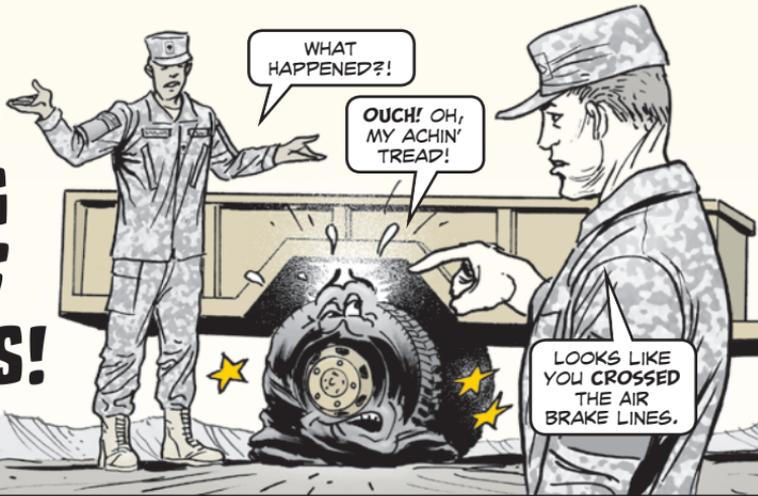

Don't throw CAUTION to the wind when it's time to hook up a trailer's brake air hoses to your 2 1/2- or 5-ton truck. Cross those air lines and the trailer brakes will lock up, burn out or ruin the tires!

So make sure your trailer's hooked up right. It's not that hard. Just locate the SERVICE and EMERGENCY air couplings and use the TM to verify which is which on your trailer.

If they're not already marked, it's a good idea to color-code the trailer air hose connectors and the truck's gladhand couplings now. A dab of blue paint on the SERVICE connectors and red on the EMERGENCY pair will keep things straight the next time you hook 'em up.

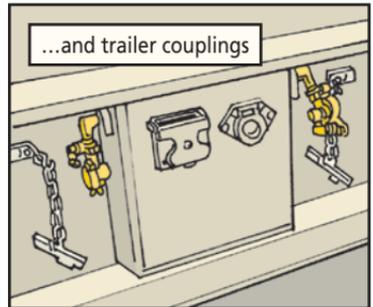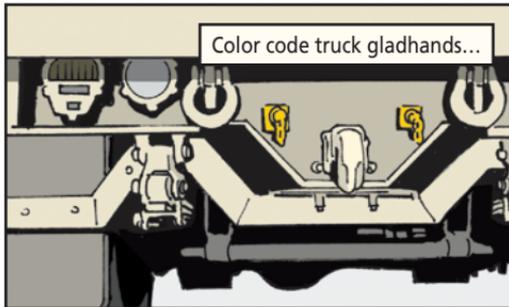

YOU CAN ALSO ADD A SERVICE OR EMERGENCY ID PLATE TO YOUR TRUCK'S GLADHANDS WITH THESE NSNs...



ID Plate	2 1/2-ton truck NSN 9905-	5-ton truck NSN 9905-
SERVICE	00-740-9721	00-999-7370
EMERGENCY	00-774-4284	00-999-7369