



Big BFA Difference for M2A1

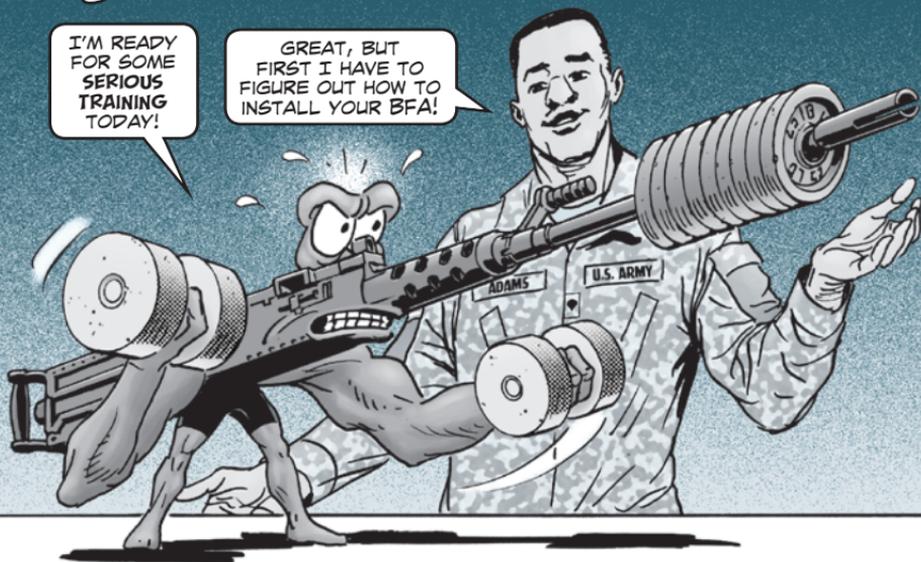

When you get ready to train with your new M2A1 machine gun, you must do things differently than you did with the M2. Before you can install the M19 blank firing attachment (BFA) on the M2A1, you must first remove the M2A1's flash suppressor and install a barrel cap in its place. The procedure is in WP 0002 in the M19's TM 9-1005-314-13&P (Jun 13), *Preparation of M2A1 for Blank Firing Attachment*.



To install M19 BFA on M2A1, first remove flash suppressor and install a barrel cap in its place

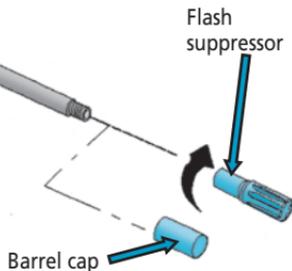

THE BARREL CAP, NSN 5340-01-545-2949, IS PART OF THE BII IN TM 9-1005-314-13&P. IT SHOULD COME WITH THE M19.

ONCE THE BARREL CAP IS ON, THE M19 CAN BE INSTALLED FOLLOWING THE PROCEDURE IN WP 0002.