

TRACK REPLACEMENT MADE SIMPLE

REPLACING A TRACK ASSEMBLY IS EXPENSIVE AND TIME CONSUMING.

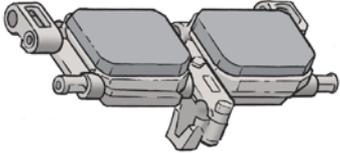

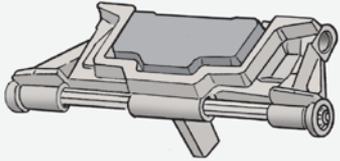
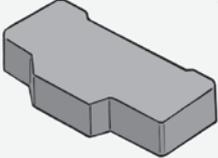
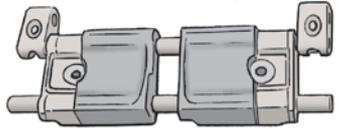
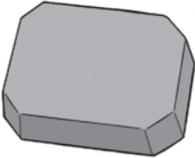
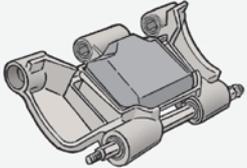
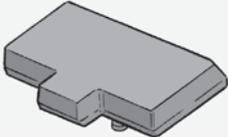
THAT'S WHY YOU SHOULD **NEVER** REPLACE THE **ENTIRE** ASSEMBLY IF YOU CAN HELP IT.

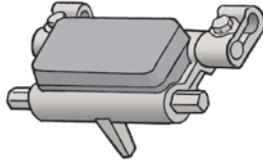
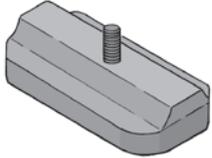
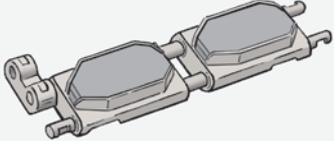
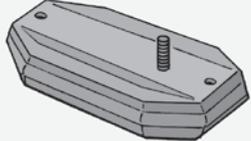
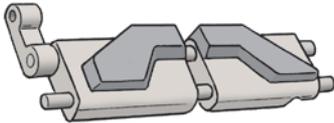
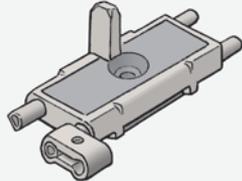
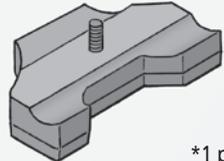


IF ONLY **A FEW** SECTIONS OR SOME RUBBER PADS ARE WORN OR DAMAGED, REPLACE **THEM** INSTEAD.

WHEN IT'S TIME FOR TRACK MAINTENANCE, MAKE **THIS** YOUR MANTRA:
 • **Never** order a track shoe if a track pad will do.
 • **Never** order a track assembly if a track shoe will do.
 REPLACING JUST THE TRACK SHOES OR ORDERING TRACK PAD KITS AS NEEDED NOT ONLY SAVES YOUR UNIT MONEY, IT ALSO SAVES YOU THE TIME AND EFFORT OF REPLACING AN ENTIRE TRACK ASSEMBLY.

USE THE CHART BELOW TO FIND THE NSNs FOR YOUR VEHICLE'S TRACK SHOES AND PAD KITS.

| Vehicle | Track Shoe | NSN 2530- | Cost | Pad Kit | NSN 2530- | Cost |
|-----------------|---|-------------|-------|---|-------------|---------|
| M1-Series Tank | T158LL (1 shoe) | 01-435-5175 | \$778 | 2 pads + hardware | 01-295-3112 | \$32.19 |
| |  | | |  | | |
| Bradley/MLRS | T157i (1 shoe) | 01-442-9686 | \$288 | 1 pad + hardware | 01-440-7615 | \$11.32 |
| |  | | |  | | |
| Bradley/MLRS | T161 (1 shoe) | 01-587-6141 | \$502 | 2 pads + hardware | 01-598-1727 | \$39.78 |
| |  | | |  | | |
| M113-series FOV | T130 (1 shoe) | 00-078-2908 | \$202 | 1 pad + hardware | 01-130-3366 | \$10.11 |
| |  | | |  | | |

| Vehicle | Track Shoe | NSN 2530- | Cost | Pad Kit | NSN 2530- | Cost |
|------------------------------------|---|----------------------------|----------------|---|----------------------------|--------------------|
| M113-series FOV | T150 (1 shoe) | 01-496-4444 | \$320 | 1 pad + hardware | 01-496-8858 | \$16.10 |
| |  | | |  | | |
| AVLB (M60 chassis) | T142 (1 shoe) | 00-150-5897 | \$903 | 1 pad + hardware | 00-150-5895 | \$44.36 |
| |  | | |  | | |
| M88-series recovery vehicle | T107 (1 shoe) | 00-692-9316 | \$516 | N/A | N/A | N/A |
| |  | | | | | |
| M109A6 Paladin/M992A2 Ammo Carrier | T154 (1 shoe) T154M | 01-346-9233 01-630-9199 | \$322 \$381 | T154* T154M* | 01-353-7500 01-629-7612 | \$21.89 \$25.97 |
| |  | | |  | | |

*1 pad + hardware