


Catch Bent Catch Assembly

HERE'S A GOOD PMCS
TIP YOU SHOULD DO
BEFORE LOADING PODS!

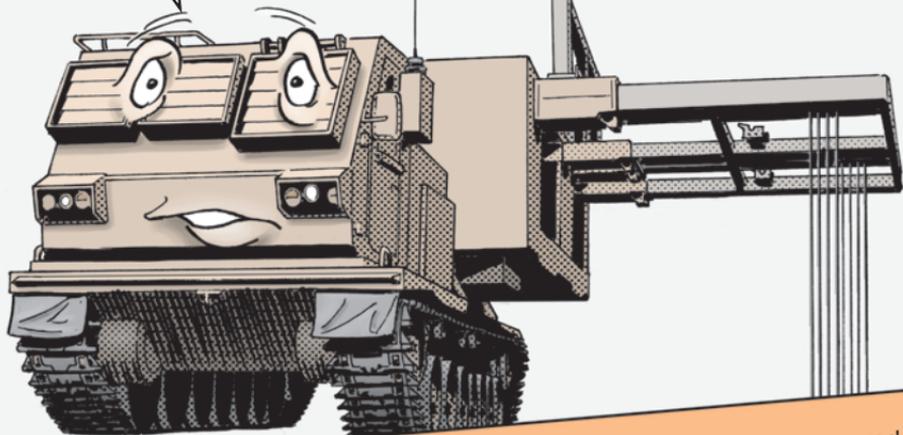

Dear Editor,

Before loading pods in the MLRS, do PMCS on the link assembly door rod link and track roller to make sure the blast door opens and closes properly.


One good thing to check especially is the position of the blast door link assembly. The assembly should be straight up and down.

Another good check is the clearance between the door close cam and the center of the door hinge. The clearance should be between 1 and 3mm. If the blast door link assembly is out of alignment or the clearance between the door close cam and door hinge is wrong, the blast door's roller assembly can be damaged. Then you can't open or close the blast door.

If you spot problems, tell your repairman.

SSG Carlos Rivera
2/18 FA
Ft Sill, OK

Make
sure blast
door's link
assembly is
straight up
and down
before
loading
pods

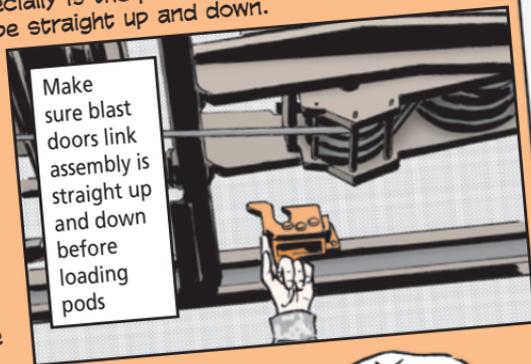

GOOD
CATCH,
SERGEANT.
THANKS!

