


SEARCHING FOR SHOCKS?

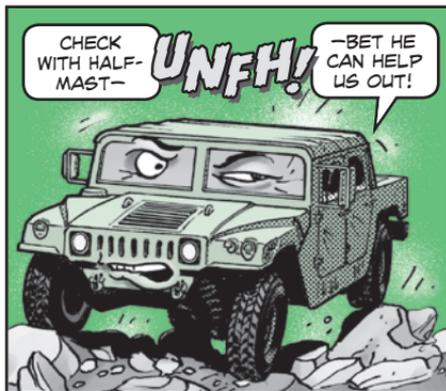

Dear Master Sergeant Half-Mast,

I'm having trouble finding a good NSN for the front shock absorber on our HMMWVs. FED LOG says NSN 2510-01-190-3862, which we've always used, is now a terminal item with no replacement. Do you have any words of wisdom?

MSG R.R.C.

Dear Master Sergeant,

You bet I do! TACOM says the front and rear shocks for your HMMWV must now be replaced in pairs. With that in mind, they've created two different kits that include two shocks and the locknuts needed for installation.

The front shock absorber kit comes with NSN 2510-01-554-1785. Get the rear shock absorber kit with NSN 2510-01-554-1789.

Half-Mast