


Make sure each carrier has both the -10 TM and the operator's cards. Soldiers need both when they're doing PMCS and you'll need both to pass inspection. Order the cards with NSN 7960-01-491-9282.

SSG Brandon Milhouse
CBRN School
Ft Campbell, KY

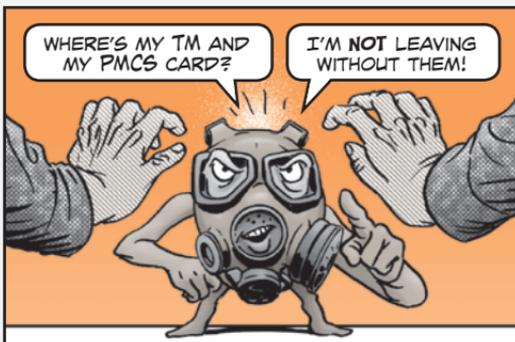

Editor's note: Great info, Sergeant. Lots of Soldiers will breathe easier thanks to your tips.



JCAD Needs M42 Alarm!



CBRN SPECIALISTS, WHEN YOU GET THE NEW M4 JCAD (JOINT CHEMICAL AGENT DETECTOR), NSN 6665-01-552-2704, OR M4A1, NSN 6665-01-586-8286, YOU SHOULD **TURN IN** THE M22 ACADA (ALARM, CHEMICAL AGENT, AUTOMATIC) OR M43A1 CHEMICAL AGENT DETECTOR.

BUT **DON'T** TURN IN THE M42 ALARM, NSN 6665-00-859-2215. YOU **WILL** NEED IT FOR THE JCAD. TURN IN THE M42 ONLY IF IT'S EXCESS.



IF YOU HAVE QUESTIONS, CONTACT TACOM'S AARON BENNETT AT DSN 786-1551, (586) 282-1551, OR EMAIL: aaron.m.bennett5.civ@mail.mil