


Trucks...

M66 MOUNT YES== M36 MOUNT NO

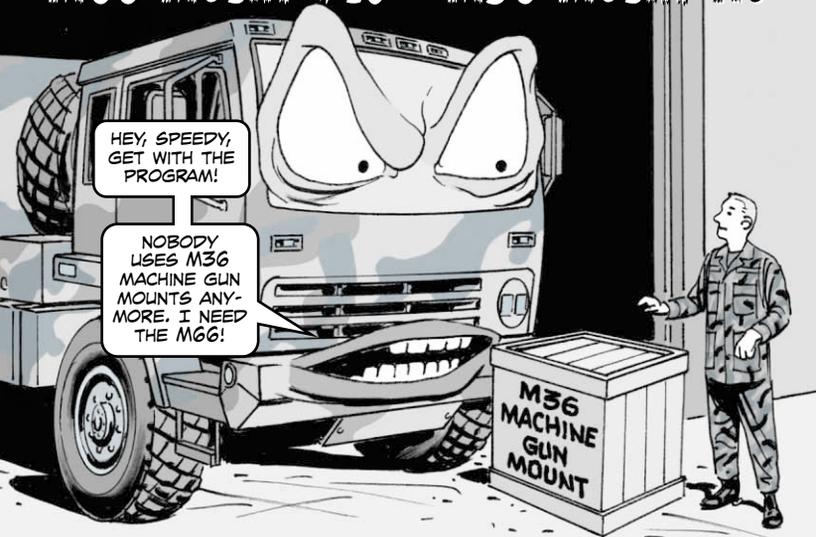

If any of your trucks have the M36 machine gun ring mount, they shouldn't have. The M36 is history—it's discontinued and should be turned in to your local demil facilities or reclassified as an M66 ring mount, depending on which version of the M36 you have.

If your M36s are NSN 1005-01-099-5205 or NSN 1005-01-099-5206, they should be reclassified on your property book as M66 ring mounts under LIN M74364. All other M36s should be turned in.

All trucks except the M939 should be using the M66 ring mount, NSN 1005-00-701-2810.

If you're unsure how to mount the M66, check your vehicles' -20P TMs. They list the parts and kits required for mounting the M66. Mounting instructions come with the kits.



HERE ARE THE KITS YOUR DIRECT SUPPORT NEEDS TO MOUNT THE M66 ON THE MOST COMMON LARGE TRUCKS...



M809-series 5-ton:
mounting kit, NSN 1005-01-226-4589, and cab reinforcement kit, NSN 2590-01-322-2694. See Fig 513 in TM 9-2320-260-34P-2 for info on the M809's three-post mount.



FMTV:
mounting and reinforcement kit, NSN 1005-01-381-5431



M35-series 2 1/2-ton:
mounting kit, NSN 1005-01-226-4589, is used on both the M35A2 and M35A3.

The cab reinforcement kit, NSN 2590-01-322-2694, is needed for the M35A2 only. The M35A3 already has cab reinforcement installed. See Fig 306 in TM 9-2320-361-34P for info on the three-post mount kit and Fig 318 for info on the cab reinforcement kit.

If you don't install the reinforcement kit when you install the M66, the mount's weight cracks the cab. The only exceptions are the HEMTT and M35A3, which don't need the reinforcement kit.



M977-series HEMTT:
mounting kit, NSN 2590-01-220-6377



M939 Truck



The M939-series 5-ton does **not** use the M66 ring mount. If your MTOE authorizes the M66 for the M939, LIN M74364, it's wrong. The M66 will damage the cab structure of the M939. The M939 uses the machine gun mount kit, NSN 1005-01-432-3339, a four-post lightweight weapon station. To mount the lightweight weapon station, you **must** install the cab reinforcement kit, NSN 2590-01-436-9144.

The only mounts that can be used with the **lightweight** weapon station are the MK64 Mod 9, NSN 1010-01-412-3159, or the MK93 Mod 1, NSN 1005-01-383-2757. The only weapons safety-certified to date for the M939 are the MK 19, M2, and M60 machine guns.

It's important to use a catch bag with the mounts to prevent spent casings and links from falling into the cab.

See Fig 620 in TM 9-2320-272-24P for info on the M939 truck ring mount.

The MK64 mount is covered by TM 9-1010-231-23&P and MK93 Mod 1 by TM 9-1005-245-13&P.

The M66 mount is covered by TM 9-1005-245-13&P, which contains M66 part replacements.

After any of the kits are installed, unit-level maintenance can replace most parts by using the NSNs in the -20Ps.

