


SEE ...

Bent Fins Block Air

BENT FINS
REALLY BURN
MY BEHIND!

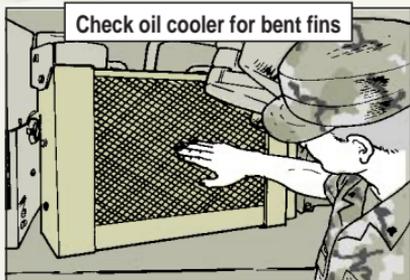

Some well-meaning operators use high-pressure water on the SEE's hydraulic oil cooler.


They're trying to get dirt and caked mud off the cooler's fins to let cooling air in. But, what they do is bend fins and that keeps air out.

Without cooling air, the oil overheats, blowing seals and burning up O-rings on the cylinder rods. Then hot oil can make the SEE's attachments too hot to touch.

Lay off the high-pressure water. Instead, use low-pressure air or water from a garden hose and a brush to clean off the fins. And when you see bent fins, straighten them with the fin-straightening tool, NSN 5120-00-157-2180, in the Common shop sets.

Deployable Universal Combat Earthmover ...

Winch Warning

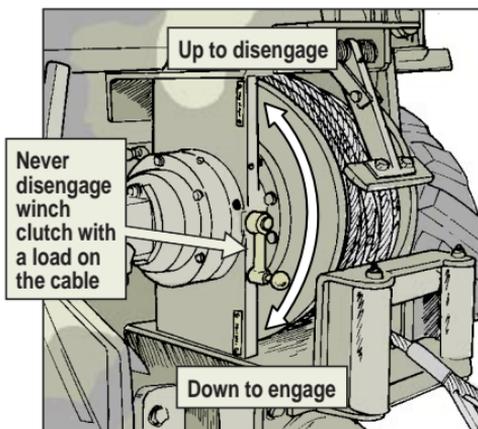

Operators, read and heed the warning on Page 51 of TM 5-2430-200-10 before using the DEUCE's winch.

Do not move the winch's clutch lever to the DISENGAGED position when there's a load on the cable. That releases the load on the cable and the earthmover will jump forward. Someone could get hurt—or killed!

For safety's sake, keep your hand away from the lever when there's a load on the cable.