


LINES, TUBES AND

FITTINGS COVERED?

THE TIME HAS COME! ATTACK ALL EXPOSED OPENINGS!



CAPS AND PLUGS... PROTECT THOSE LINES!

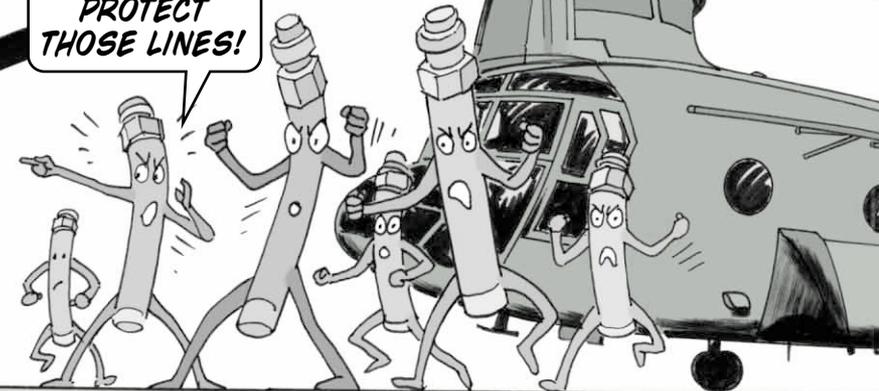


LEAVING AIRCRAFT LINES, TUBES AND FITTINGS UNCOVERED WITHOUT CAPS, BAGS OR PLUGS WHILE DOING CHECKS OR MAINTENANCE IS A BAD CHECK AGAINST YOU.



THIS IS WHAT YOU'LL GET...

- ✓ Dirt in open lines contaminates fluids and residue won't let connectors seal.
- ✓ Moisture in lube becomes paste and can't do its job.
- ✓ Threads get smashed, and delicate connector pins get broken or bent.

SO USE AND REUSE CAPS AND PLUGS THAT COME WITH COMPONENTS, HOSES, LINES AND FITTINGS. CHECK AND CAP, BAG OR WRAP ALL EXPOSED OPENINGS AND LINES TO PREVENT FLUID SPILLS, MOISTURE IN OIL AND DIRT BUILDUP.

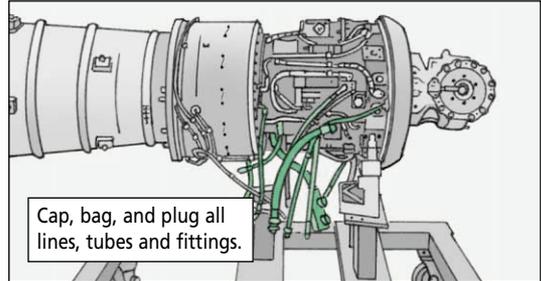

Cap, bag, and plug all lines, tubes and fittings.


IF YOUR TM DOESN'T LIST CAPS OR PLUGS TO USE, USE THIS LIST TO IDENTIFY PLUGS AND CAPS NEEDED TO SEAL FLUID SYSTEMS AND PROTECT THREADS ON YOUR BIRD...



Tube Plug (Flared) NSN 4730-	Size (Outside diameter) inches
00-287-0109	1/8
00-287-0100 (plain)	3/16
00-287-0110	1/4
00-287-0111	5/16
00-715-0082	3/8
00-287-0112	1/2
00-287-0113	5/8
00-287-0116	3/4
00-287-0117	7/8
00-287-0118	1

IF WE WORK TOGETHER...

...WE CAN BEAT 'EM EVERY TIME!

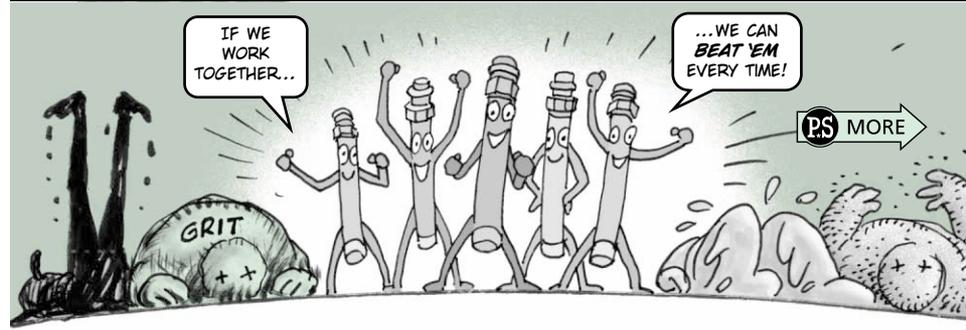

PS MORE →

HERE'S MORE
INFO FOR YOU
ON CAPS AND
PLUGS!



Tube Cap (HYD) (Flareless) NSN 4730-	Size (Outside diameter) inches
00-837-9842	1/8
00-115-0210	3/16
00-958-3704	1/4
00-640-0632	1/4
00-985-5165	5/16
00-618-3572	3/8
00-990-2585	3/8
00-451-2762	1/2
00-618-4227	5/8
00-412-8260	5/8
00-202-8792	3/4
00-221-2128	3/4
00-400-2223	3/4
00-085-1936	1
00-274-7120	1

Tube Plug (HYD) (Flareless) NSN 4730-	Size (Outside diameter) inches
00-540-2231	1/8
00-595-3917	3/16
00-541-7198	1/4
00-541-1465	5/16
00-202-9169	5/16
00-203-3709	3/8
00-555-7804	3/8
00-202-8341	1/2
00-202-8860	1/2
00-966-5695	5/8
00-203-0247	5/8
00-289-8627	3/4
00-203-0246	3/4
00-203-6938	1
00-289-8626	1

Cap Tube (Flared) NSN 4730-	Size (Outside diameter) inches
00-497-4244	1/8
00-221-2126	3/16
00-278-5006	1/4
01-061-4150	5/16
00-585-8769	3/8
00-221-2127	5/8
00-221-2128	3/4
00-221-2129	1

ADDITIONAL CAP AND PLUG
INFO CAN BE FOUND IN YOUR
GENERAL AIRCRAFT TMS.

CHECK OUT PARAS 4-5 AND
4-5L OF TM 1-1500-204-23-2,
AND YOUR CONSUMABLES LIST
IN TM 1-1500-204-23-6 FOR
MORE INFO.

OF COURSE, ALWAYS USE CAPS
AND PLUGS CALLED FOR IN
YOUR MAINTENANCE TMS.

PS END