

REPLACE LEAKY SEAL

HOW 'BOLT REPLACING THAT LEAKY SEAL IN MY PALADIN'S CUPOLA?

I GOTTA GO CHANGE MY CLOTHES! I'M SOAKED!

YEAH! AND I COULD USE A NEW DISPLAY UNIT WHILE YOU'RE AT IT!


A leaky seal on the Paladin's cupola cover means more than a wet crew, mechanics.

If you don't install the seal correctly, it also lets water drip directly onto the display unit (DU), NSN 7025-01-307-5519. When the DU shorts out, you have to replace it to the tune of more than \$31,000!

Keep the DU—and the Paladin crew—dry by installing the new seal like this:

1. Remove and discard the old cover seal.
2. Scrape away any dirt or old adhesive from the cover seal groove. Make sure you get it all. If any is left, the new seal may leak.
3. Apply adhesive, NSN 8040-00-152-0063, to a new cover seal, NSN 5330-01-453-1007, and press the seal into the groove.

Leaky seal drips straight onto DU

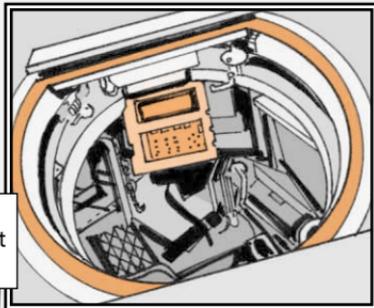

CREWMEN, DO YOUR PART BY KEEPING DIRT AND SAND BRUSHED AWAY FROM THE SEAL GROOVE BEFORE THEY CAN CAUSE DAMAGE.

REPORT ANY LEAKS AS SOON AS YOU NOTICE THEM.