


HEMTT...

# KEEP BOWL CRACKS AT BAY



**T**he fuel-water separator on your HEMTT won't do its job if its plastic bowl is cracked or broken.

Protect the bowl by installing a fuel bowl shield, NSN 2540-01-383-2252, using three cap screws, NSN 5305-00-269-3211, three nuts, NSN 5310-00-655-9544, and three lock washers, NSN 5310-00-637-9541. The shield will keep rocks, gear, big feet and other items from cracking the bowl.

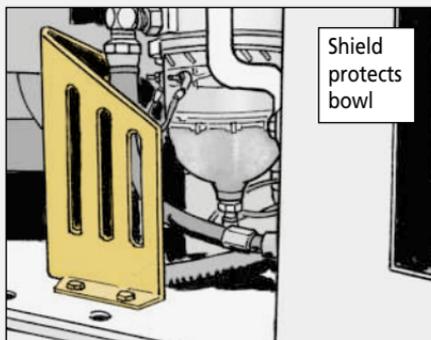

See Page 4-41 of TM 9-2320-279-20-1 for instructions on installing a replacement shield. If your truck has never had a shield installed, you'll need to drill some mounting holes first.

Use the shield as a template to mark the hole locations. Place the front of the shield  $2\frac{1}{2}$  inches from the back of the tire carrier and 3 inches in from the edge of the fender.

## HEMTT Static Reel

**NSN** 5340-01-269-4423 gets the static reel for the M978 HEMTT fuel tanker. This NSN replaces the parts info shown as Item 1, Fig 282 of TM 9-2320-279-24P.