


AIR FILTER REMINDER

KEEP THIS PM
POINTER IN MIND
AS THE DESERT
WIND BLOWS!

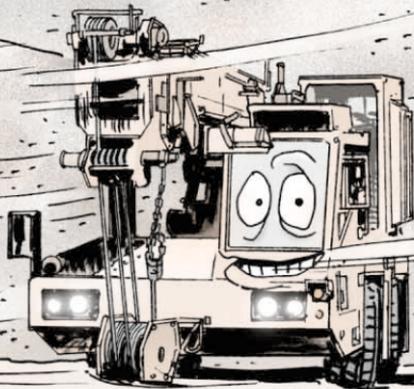

Operators, fine desert sand is everywhere. It will end up in the crane's air filter no matter what.

Just remember that you don't have to replace the primary filter element every time the restriction indicator shows red. Save the cost of a new element by cleaning the old one with compressed air or warm, soapy water.

When you use air, blow out from the inside of the element, since the sand is "in" and "on" the outside of the filter.

Then hold the nozzle at an angle to blow loose sand from the outside. That keeps you from damaging the paper element.

To get rid of oily sand, you'll need to wash the filter element with detergent, NSN 7930-00-282-9699, and warm water.

Rinse away the soap with warm water and let the element dry before you put it back in the crane.

Replace the filter element, NSN 2940-01-438-5680, after six cleanings or if it's ripped, torn or won't come clean.

If the indicator still shows red after cleaning the filter element, tell your mechanic.

