


SINGGARS
Radios...

SEAL OUT MOISTURE


WHAT'S
GOING ON
IN HERE?

MY CIRCUITS ARE
FROZEN BECAUSE YOU
FORGOT MY SEAL!

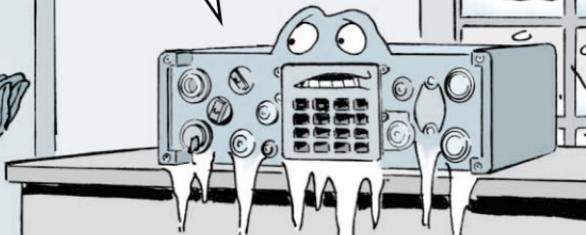

The data entry keyboard on the SINGGARS radio can be a source of another type of entry—moisture—if you don't replace the seal when you replace the keyboard. The seal makes a waterproof bond between the data entry keyboard and the body of the SINGGARS. Too often, lately, the keyboard has been replaced, but the seal has been forgotten or a worn seal used.

Seal
makes a
water-
proof
bond

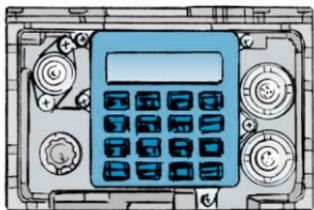

Make sure
seal is there
and in good
shape



TO MAKE IT EASIER TO
HAVE THE SEAL YOU NEED
ON HAND, HERE ARE THE
NSNS FOR EACH MODEL
OF SINGGARS...



Model	NSN
RT-1439	5330-01-325-4970
RT-1523	5330-01-325-4970
RT-1523A	5330-01-107-9249
RT-1523B	5330-01-325-4970
RT-1523C	5330-01-325-4970
RT-1523D	5330-01-443-7674
RT-1523E	5331-01-470-6782

For added moisture-resisting protection, add a light coat of silicone, NSN 6850-00-927-9461, where the seal, the keyboard and the radio body meet.