


Dissecting the Distribution Boxes




If you work with either signal distribution box, J-1077A/U, NSN 6110-00-985-7574, or J-2317A/U, NSN 6110-00-937-4964, chances are good you're in need of some parts stock numbers and some maintenance info.

TM 11-6110-201-12P on the J-1077A/U and TM 11-6110-243-14P for the J-2317A/U are both a bit skimpy on supply and preventive maintenance details.

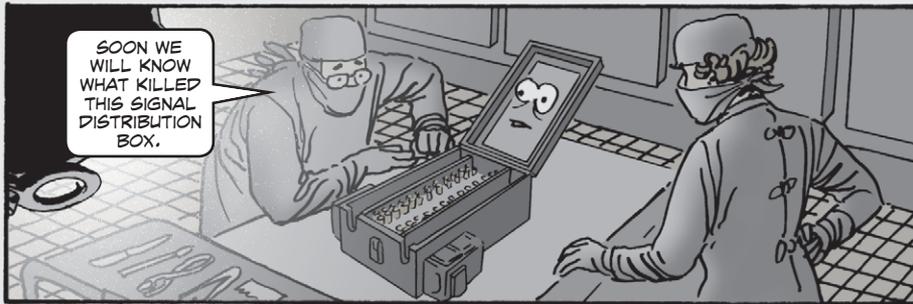

Supply

Here are the standard cables used with these distribution boxes:

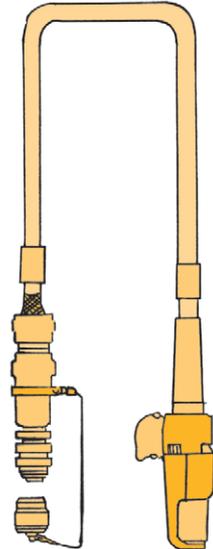


Part Number	NSN 5995-	Description, 26-pair cable	Length (ft)
SM-D-811235	01-079-3719	U-185B/G connector on one end and a MS27467T23B535 connector on the other	25
CX-4760A/U	00-889-0803	U-185B/G connector on one end and open leads on the other	15
CX-4566A/G	00-985-7571	U-185B/G connector on each end	25
CX-4566A/G	00-823-2715	U-185B/G connector on each end and cable on RC-435/U reel	250
CX-4566A/G	00-985-7569	U-185B/G connector on each end and no reel	250

Use NSN 8130-00-656-1090 to get an RC-435/U reel.

Here are the connectors used with these distribution boxes and cables:

Part Number	NSN 5935-	Description
U-185B/G	00-577-8846	Cable plug
U-186C/G	00-926-7428	Panel mount, pedestal
U-187/G	00-682-0381	Panel mount, flat
U-187A/G	01-412-4943	Panel mount, flat
MX-3227/G	01-142-9742	Contact assembly

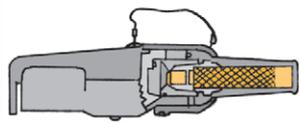

Here are the replacement parts for these connectors:

NSN	Description
5999-01-073-5507	Contact cap kit (set of 10)
5935-00-883-4265	Hock cover
4010-00-575-6233	Wire rope
4030-00-431-5536	Swag sleeve
5330-01-130-7340	Hock gasket
5975-00-874-3541	Hock rubber boot (U-185)
5970-00-685-9059	Electrical tape

