


DOING THE SLEW-TO-CUE

I'M READY TO DO THE SLEW-TO-CUE! WHERE'S MY PARTNER?

ONE MINUTE, AVENGER. FIRST, WE NEED TO TEST YOUR SLEW-TO-CUE.

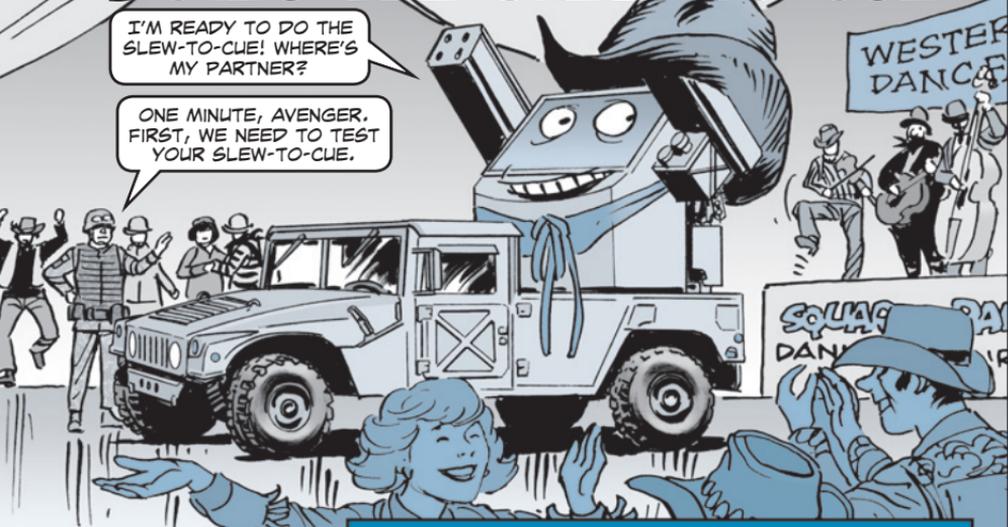

MANY UNITS ARE UNSURE HOW TO TEST THE SLEW-TO-CUE FEATURE ON THE NEWER AVENGERS.

WONDER NO MORE. HERE'S HOW TO DO IT...



THIS PROCEDURE WAS ADDED TO TM 9-1425-433-10 IN CHANGE 3 IN PARA 2-40.

1. From the initial battle display screen (BDS) on crew chief air situation display, page down to TIME, then page to the right until WEAPON TEST is highlighted. Push ENTER on the keypad.
2. The WEAPON TEST page should display. Highlight ENABLE WEAPON TEST and push the space bar until YES is highlighted. Press ENTER.
3. The grid of the test target should be highlighted. Press ENTER or input the grid manually.
4. The elevation should be highlighted. Press ENTER or input the elevation manually.
5. Press F3 to go back to the BDS.
6. Look on the BDS to make sure the test target is displayed.
7. On the HOOK, ENTER, SLEW, SCALE keypad, press HOOK.
8. Look on the BDS to make sure the target has been hooked, indicated either by a square around the test target or the target information being displayed on the right side of the BDS.
9. On the HOOK, ENTER, SLEW, SCALE keypad, press ENTER. Verify the target is displayed on the remote control unit (RCU) or FLIR monitor.
10. On the HOOK, ENTER, SLEW, SCALE keypad, press SLEW. Verify the command is displayed on the lower left of the RCU or FLIR monitor.
11. Press and hold the palm grips as the Avenger slews to the test target in azimuth and elevation.