


Open Vents Clog A/C

Operators, **don't** leave the A/C system's air vent open in your M1114 HMMWVs! When it is open—knob in the pushed-in position—the A/C evaporator coils get clogged with dirt, *hindering your A/C's performance*. You may open the vent long enough to de-fog windows, but then **close the air vent**. When the air vent is closed—knob in the pulled-out position—air re-circulates in the cab, reducing clogging.

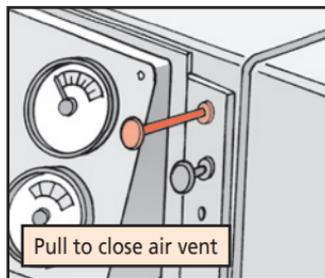

If you notice a decrease in air flow, tell your mechanics. Then they might not have to replace the clogged A/C front and rear evaporator coils.

Mechanics, de-clog the coils by thoroughly rinsing them with low-pressure potable water while using a fin comb, PN 55719, to straighten and clean condenser and evaporator fins. That fin comb comes with the refrigeration equipment tool kit, NSN 5180-00-596-1474.

Clogged coils? Thoroughly rinse with low-pressure potable water

