



MISSING WASHER KILLS CRANE

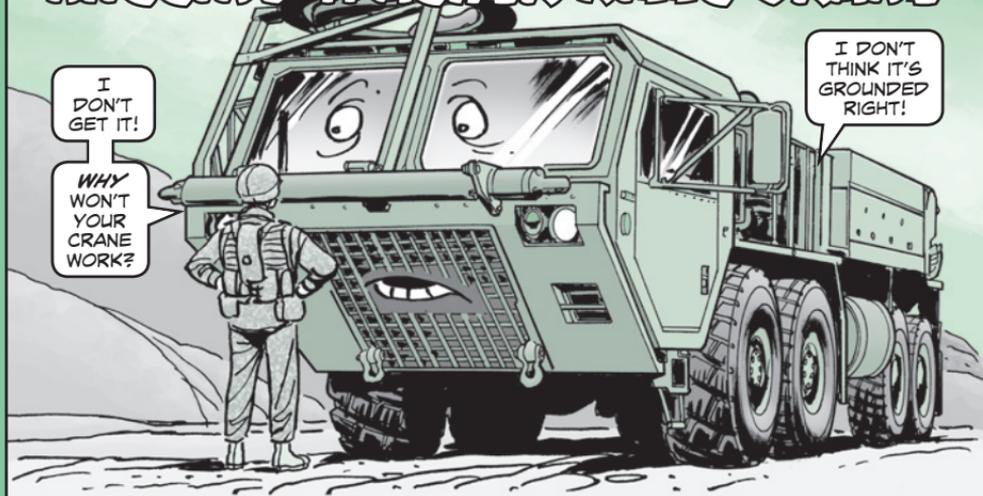


If the crane on your HEMTT wrecker won't work, it could be due to a small star washer that's missing from the ground wire.

The washer, NSN 5310-00-935-8984, is shown on Page 14-13 of TM 9-2320-279-20-2 for axle No. 4, but it's shown in the wrong place.

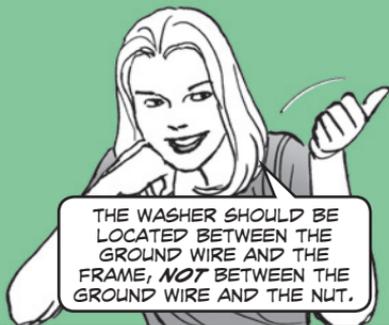

THE WASHER SHOULD BE LOCATED BETWEEN THE GROUND WIRE AND THE FRAME, **NOT** BETWEEN THE GROUND WIRE AND THE NUT.

Washer goes between ground wire and frame

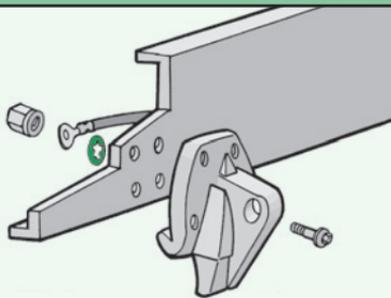

IF IT'S MISSING OR IN THE WRONG PLACE, HAVE YOUR MECHANIC FIX IT LIKE THIS...

1. Take off the nut and ground wire.
2. Scrape a spot of paint, about the size of a quarter, from around the bolt hole.
3. Put on the star washer, followed by the ground wire and then the nut.
4. Torque the nut to 110 lb-ft.
5. Spot paint any remaining bare metal with CARC.