

M2 Machine Gun...

I SURE COULD USE A SECOND SIGHT FOR THOSE TIMES I WANT TO SHOOT FOR DISTANCE!

I HAVE JUST WHAT YOU NEED...

## MOUNTING BRACKET FOR EXTRA SIGHT


...A SIDE RAIL ADAPTER!

The M2 machine gun now has a side rail adapter that allows you to mount an additional sight so that you can easily switch from near to far shooting.

A lever on the left side of the adapter lets you easily switch back and forth between sights.

Check to see if your M2 bracket assembly was manufactured to handle the adapter. If it has the three pilot holes in the NEAR/FAR adapter, you can order the rail adapter, NSN 5340-01-536-6189, and install it. See Page 23 in PS 654 for instructions on how to do that:

<https://www.logs.a.army.mil/psmag/archives/PS2007/654/654-22-23.pdf>

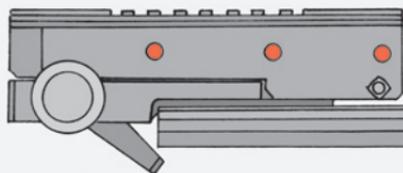

Check for three pilot holes

But if your bracket doesn't have those three holes, you will need to order a new bracket with NSN 5340-01-502-7233. That will bring both the bracket and the side rail adapter.

When mounting the AN/PEQ-2A sight on the side rail, use these offsets:

- 500-m zero: IR aim point
- 10 meter-CM:  
6.5U, 9.7R CM
- 25 meter-bullet strike zone  
in target squares: 2.0D,  
9.5L squares

Assembled  
bracket with  
side rail

