

Making the Most of Source, Maintenance and Recoverability Codes

SMR CODE CHARTS HELP USERS FIND SOURCE, MAINTENANCE AND RECOVERABILITY INFO FOR PARTS MORE QUICKLY.

THE SMR CHARTS ARE USUALLY FOUND IN THE REPAIR PARTS AND SPECIAL TOOLS LIST (RPSTL) OF TECHNICAL MANUALS.



HERE'S AN EXAMPLE OF HOW SMR CODES WORK.



A bulk transfer fuel pumping assembly, NSN 4320-01-337-7538, is missing its noise enclosure. TM 10-4320-324-24P lists a CAGE Code of 36024 with PN 13220E1070. But the SMR Code is **XDOHH**.

An **X** in the first position means the part is not stocked by the Army or DoD.

The second position tells you what to do to get the part. The **D** tells users to locally purchase the part.


The third position defines the lowest level of maintenance that can **remove** or **replace** the item. The **O** means the organization/unit can replace the item.

Position 4 defines who can **repair** the item. The **H** means repair is done at the general support [sustainment] level.

In the last position the **H** means that the GS [sustainment] level determines when the part is no longer serviceable or repairable.

MOST SMR CHARTS WERE ASSIGNED WITH FOUR-LEVEL MAINTENANCE IN MIND.

THEY WILL BE REVISED AS THE ARMY MOVES TOWARD TWO-LEVEL MAINTENANCE.

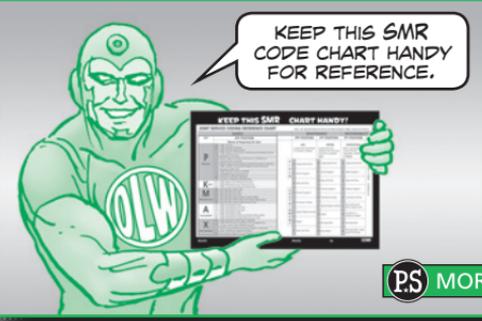

KEEP THIS SMR CHART HANDY!

JOINT SERVICE CODING REFERENCE CHART

(REF: AR 700-82/OPNAVIST4410.2/AFR66-45/MCO 4400.120/DLAR 4100.6)

SOURCE		MAINTENANCE		RECOVERABILITY	
1ST	2ND POSITION	3RD POSITION	4TH POSITION	5TH POSITION	6
	Means of Acquiring the Item				
P (Procure)	A ITEM: Stocked	USE: Lowest level authorized to remove or replace.	REPAIR: Lowest level with capability and resources to perform complete repair.	DISPOSITION: When unserviceable or uneconomically repairable, condemn or dispose.	
	B ITEM: Stocked, Insurance				
	C ITEM: Stocked, Deteriorative				
	D ITEM: Support, Initial Issue or Outfitting and Stocked only for additional Initial Issue				
	E EQUIP: Support, Stocked, Initial Issue or Outfitting of Specified maint Activities				
	F EQUIP: Support, Non-Stocked, Centrally Procured on demand				
	G ITEM: Stocked, for Sustained Support, Uneconomical to Produce at Later Time				
	H ITEM: Stocked, Contains HAZMAT. HMIS/MSDS Reporting Required				
	R Terminal or Obsolete, Replaced				
Z Terminal or Obsolete, Not Replaced					
K (Kit)	D ITEM: Deport O/H & Maintenance Kits	FIELD	O Organization/Unit	O Organization/Unit	O Organization/Unit
	F ITEM: Maintenance Kit, Place at O,F,H,L				
	B ITEM: in both Depot Repair & Maint Kits				
M (Manufacture)	O MFG OR FAB at Unit Level	SUSTAINMENT	H General Support	H General Support	H General Support
	F MFG OR FAB at DS Level				
	H MFG OR FAB at GS Level				
	L MFG OR FAB at Special Repair Activity (SRA)				
	G MFG OR FAB at Both Afloat and Ashore (Navy Only)				
	D MFG OR FAB at Depot Maintenance Level				
A (Assembled)	O ITEM: Assembled at Unit	K Contractor Facility	K Contractor Facility	K Contractor Facility	K Contractor Facility
	F ITEM: Assembled at DS Level				
	H ITEM: Assembled at GS Level				
	L ITEM: Assembled at SRA				
	G ITEM: Assembled at Afloat and Ashore (Navy Only)				
	D ITEM: Assembled at Depot Maintenance Level				
X (Not Stocked)	A ITEM: Requisition Next Higher Assembly	L Special Repair Activity	L Special Repair Activity	L Special Repair Activity	L Not Authorized Below Depot Level
	B ITEM: Not Procured or Stocked. If not available thru salvage, order using CAGE/Part Number				
	C Order using Installation Drawing, Diagram, Instruction Sheet. Identify by Cage/Part Number				
	D Not Stocked. Obtain via Local Purchase+C17				
		D Depot	D Depot	D Depot	D Condemn or Dispose at Depot
		Z Nonreparable	Z Nonreparable	Z Nonreparable	Z Nonreparable
		Z Navy Use Only	B Recondition	A	Nonreparable, needs special handling

S
E
R
V
I
C
E

O
P
T
I
O
N

C
O
D
E
S