


Blow Away Grime at Cleaning Time

I'M GONNA GET YOUR AIR FILTERS AS CLEAN AS NEW!

HOW MANY TIMES I GOTTA TELL YA? THE LIMIT ON THAT THING IS 30 PSI!

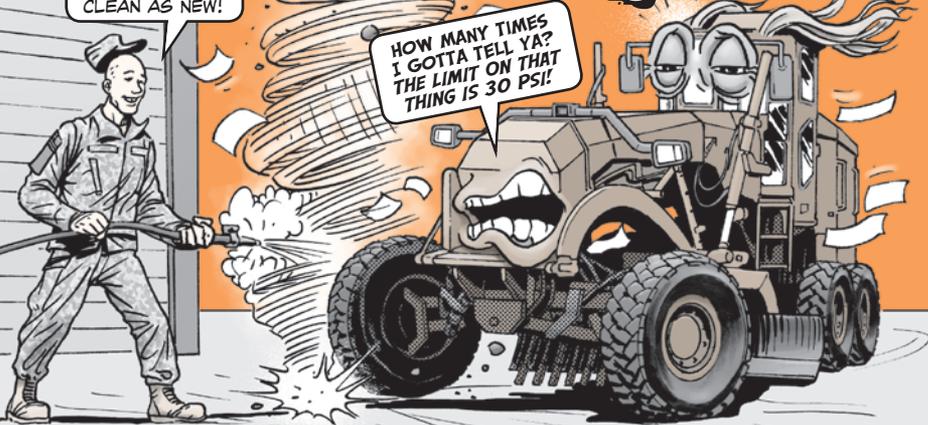

CLEAN AIR KEEPS YOUR 120M GRADER GRADING SMOOTHLY.

SO WHEN IT'S CLEANING TIME, YOU'LL NEED TO OPEN THE GRADER'S AIR FILTER ELEMENT CANISTER AND PULL OUT THE PRIMARY AND SECONDARY FILTERS.

USE AN AIR HOSE TO BLOW LOW-PRESSURE AIR (30 PSI OR LESS) FROM THE INSIDE OUT.



NEVER BANG THE FILTER ON A ROCK OR HARD SURFACE LIKE THE GRADER'S TIRE OR MOLDBOARD.

Use 30 psi air to clean out primary...



...and secondary filters



THAT DAMAGES THE FILTER AND ALLOWS DIRT TO GET INTO THE ENGINE.



REPLACE THE PRIMARY AIR FILTER ELEMENT, NSN 2940-01-580-0028, ONCE A YEAR OR AFTER SIX CLEANINGS, WHICHEVER COMES FIRST. SAME GOES FOR THE SECONDARY FILTER, NSN 2940-01-579-8964.



Make the Seal Tight

WITH THE CLEANED FILTER ELEMENTS REINSTALLED, MAKE SURE THE CANISTER LID IS CLOSED COMPLETELY. A TIGHT SEAL IS NEEDED TO KEEP OUT DIRT AND SAND WHICH CAN RUIN YOUR GRADER'S TURBOCHARGER AND ENGINE.


HERE'S HOW: PLACE THE LID BACK IN PLACE WITH ITS TOP ARROWS POINTING UP TO THE 12 O'CLOCK POSITION. THEN USE THE THREE LATCHES TO LOCK THE LID SNUG IN PLACE.

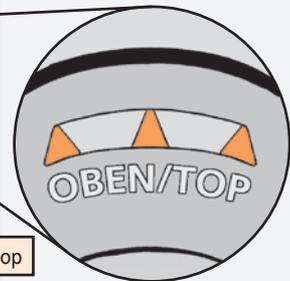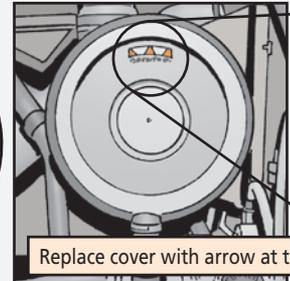

Replace cover with arrow at top

ATLAS, 6K VRRT Forklifts...

HERE ARE THE MANUALS YOU'LL NEED TO KEEP MY CLS UP AND RUNNING!

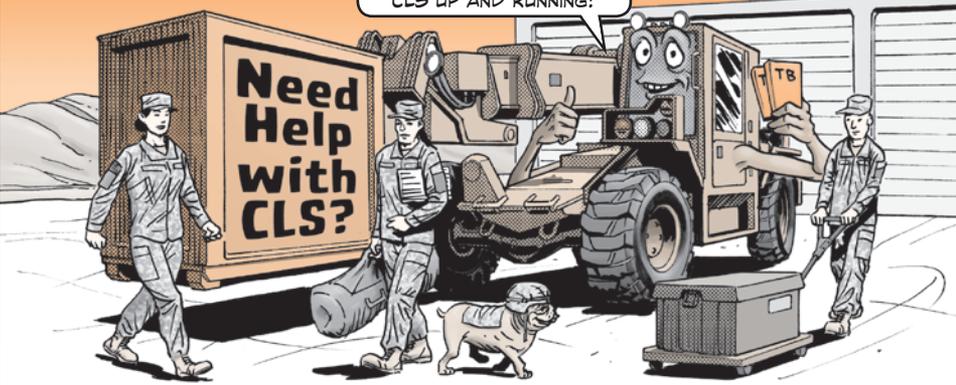

Dear Half-Mast,
One of our units had a question about the central lubrication system (CLS) on their 10K ATLAS and 6K variable reach rough terrain (VRRT) forklifts. The CLS weren't working and they had no idea how to order parts or service them.
I did some research, but couldn't find anything in the vehicle TMs. Is there a service or parts manual for the CLS installed on these forklifts?
Mr. M.G.

Dear Sir,
Yes, there is. The 10K ATLAS CLS is covered in TB 10-3930-673-13&P-1 (Feb 09). TB 10-3930-660-13&P (Feb 09) covers the 6K VRRT CLS.
Both TBs include installation, maintenance and parts information for the CLS. Units will need to order and install the CLS at their own expense.
Half-Mast