Don't Be Alarmed

Operators, the last thing you want in a **tactical** situation is a backup alarm going off on your truck or construction equipment.

So, make sure it won't.

On M915/A1/A2-series trucks, use the switch on the dash to shut off the alarm.

Switch alarm to OFF

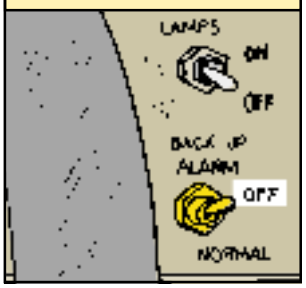

On CAT equipment, like the 130G grader, 621B scraper or MW24C scoop loader, turn the light switch to a B.O. (blackout) position or OFF to kill the alarm.

Turn grader's switch to BO or OFF

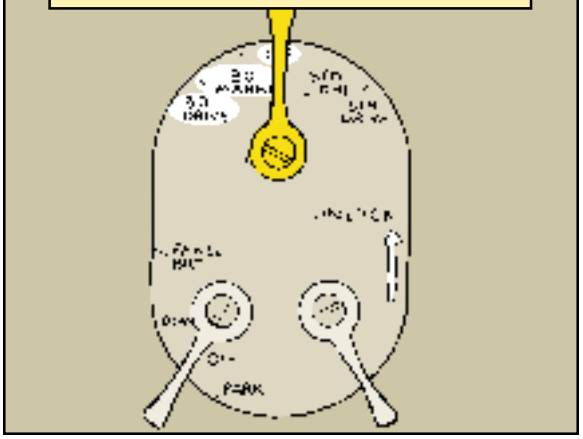

Other types of commercial construction equipment have a fuse for the alarm system. So, you'll have to pull the fuse and store it in an unused spare slot.

Put pulled fuse in spare slot

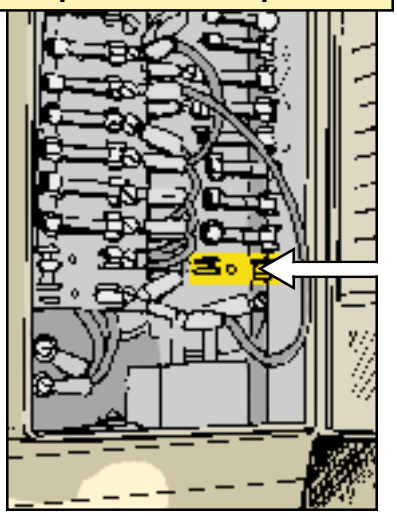

If your vehicle doesn't have either a switch or a separate fuse, check the wires at the alarm for a connector. Pull the connector apart carefully so you can put it back together later.
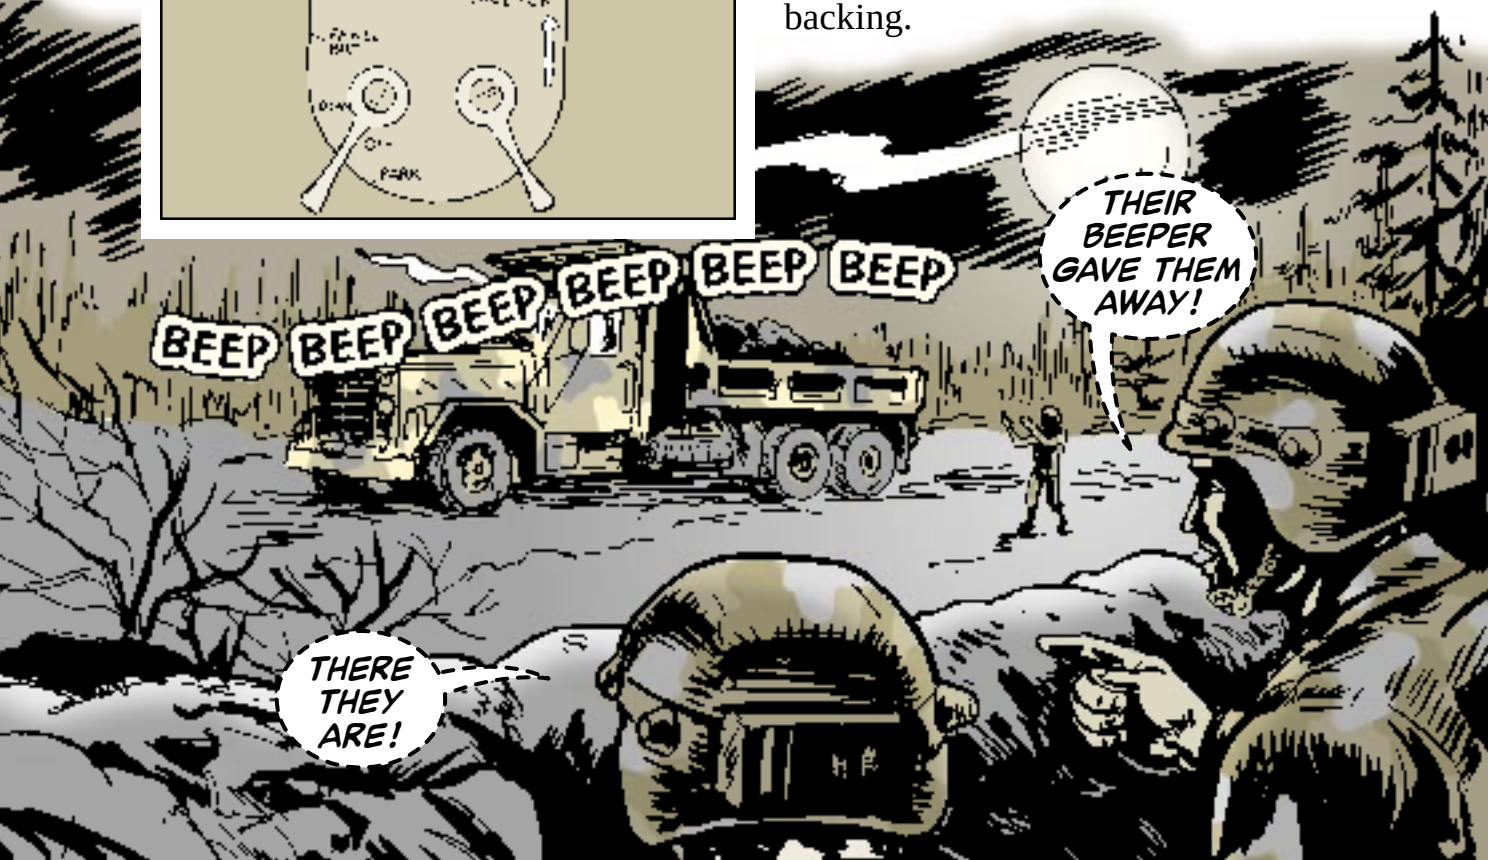
When you're operating your gear without the backup alarm, use a ground guide and lots of extra caution when backing.