

Radiac Equipment...

Radiating Good Health

SEE WHAT A LITTLE BIT OF CARE HAS DONE FOR ME...

... I AM READY TO DETECT!




REMEMBERING THESE TWO TIPS WILL HELP YOUR RADIAC EQUIPMENT RADIATE GOOD HEALTH...

Most NBC rooms have at least some radiac sets and radiac meters: generally AN/VDR-2s, UDR-13s, IM-93s, and AN/PDR-75s. Normally, radiac equipment doesn't need much care, but unfortunately the equipment often gets no care. Then it doesn't work.



Remove batteries for storage

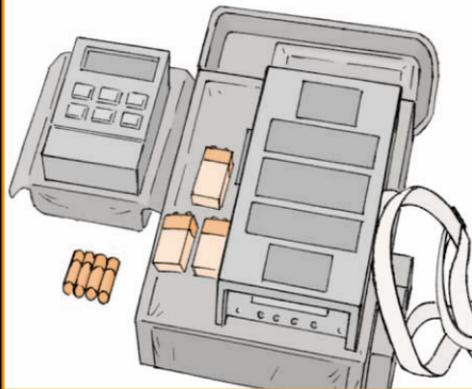

- Don't store radiac equipment with the batteries installed. The batteries can leak and that corrodes the battery contacts and can damage the radiac equipment itself.

- Every month take all the radiac sets and radiacmeters out of the cabinet and turn them on and make sure they're working properly. In many NBC rooms, radiac equipment isn't used for months and problems aren't spotted until the item is needed.