



BLURRY VISION?

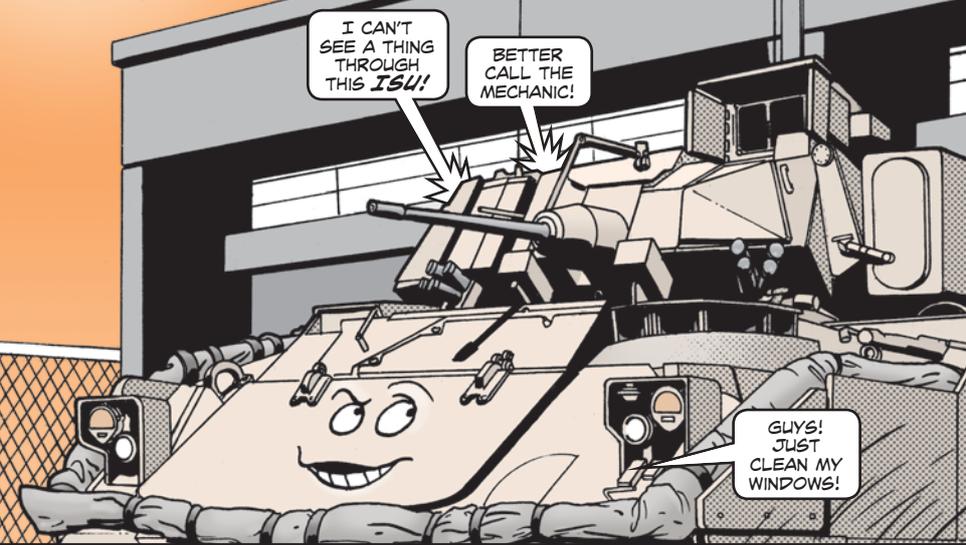

Is the view through your Bradley's integrated sight unit (ISU) blurry? Most operators assume that the ISU needs to be purged and charged with nitrogen to get rid of condensation inside the unit.

But the solution could be simpler. First, try turning on the ISU defogger fan. If the blurriness is caused by condensation outside the unit, that usually takes care of it.


Still blurry? Could be the windows on the ISU's doghouse assembly are dirty. You can't just grab a paper towel and some glass cleaner, though. The ISU glass has a special coating on it. If you clean it wrong, the coating is damaged and your ability to see just got worse.

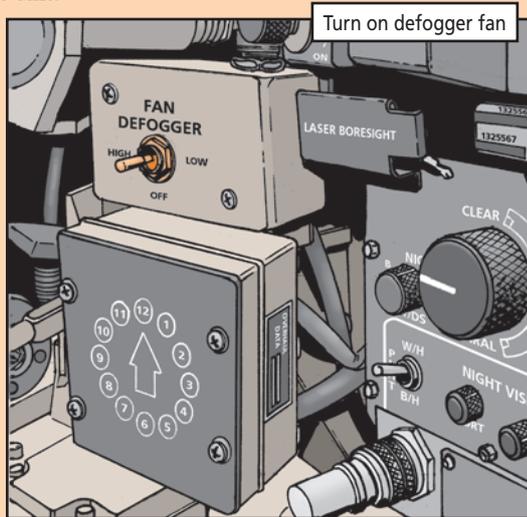

HERE'S THE RIGHT WAY TO CLEAN THOSE WINDOWS...



1. Rinse the window with clean water from a squirt bottle until all loose particles are gone. Warm water works best.

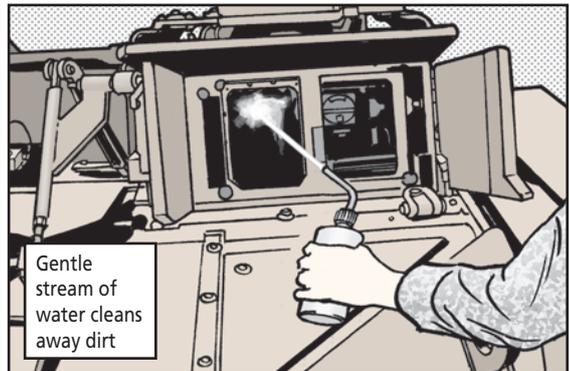

Gentle stream of water cleans away dirt

2. Soak a lens tissue, NSN 6640-00-436-5000, in lens cleaning solution, NSN 6850-00-227-1887, and clean the window with light pressure. Wipe in a single direction. Wiping in multiple directions is a good way to smear the glass and increases the chance of scratching it.



3. Flush off the cleaning solution with clean water.
4. Dry the windows by wiping lightly in a single direction with clean lens tissue.

