


USE THE DUST CAPS

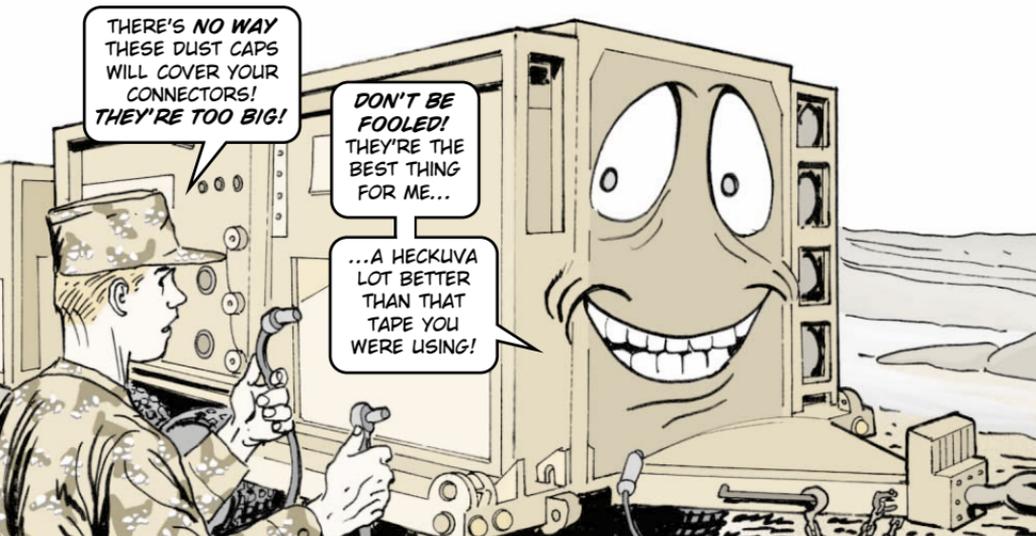

It's plain and simple...dust caps aren't much good if you don't use em.

Keep that in mind when you disconnect the chemical feed lines from the cans on your 600-GPH reverse osmosis water purification unit (ROWPU).

If you leave those lines uncovered, dust and dirt and anything gritty will get inside the chemical connectors.

Don't be fooled by the dust caps when you're ready to use 'em. They may seem too large to fit snugly over the connectors. But give 'em a try. They'll snap right in place over the groove on the connectors. Order the caps with NSN 5430-01-307-5989, 5430-01-307-2679, or 5430-01-307-4394. (Make a note that these NSNs will be added to TM 10-4610-215-10 and to the -24P.) You may have to try all three NSNs to find the right cap for your connector.

By the way, tape is no substitute for a missing connector cap. It leaves behind a sticky residue that attracts even more dust and dirt.

