

Basics of Binocular Care



I MAY NOT BE AS BIG AS YOU, M22... BUT I'M JUST AS POWERFUL!



CAN'T WE ALL GET JUST GET ALONG?

The M24 miniature binoculars are lightweight and small enough to fit in your BDU pocket. But they're every bit the equal of the larger M22 binoculars when it comes to magnification, laser protection and reticle features.

NSN 1240-01-430-6944 gets you the M24. CTA 50-909 is your authorization for ordering.

SOME BASIC CARE WILL HELP YOUR M24S SEE LONGER AND FARTHER...



Save Your Sight

- It's OK to breathe directly on the lens for cleaning. Just wipe the moisture off right away, especially in freezing weather. If the moisture freezes, it'll obstruct your vision. Also, you might damage the lens trying to scrape off the ice.
- Use lens covers when you take your binoculars from a warm area to a cold area. That way the lenses cool gradually and you avoid condensation.
- Never let the binoculars lie uncovered in direct sunlight. Heat lets gas escape from inside and can break down the adhesive that holds the optical elements in place.
- If you're in sandy, dusty areas, keep the lens covers on and the binoculars in your pocket and out of the elements. Blowing sand and dust scratch the lenses and dirty the adjusting mechanisms.



I GOT IT MADE IN THE SHADE!

Your M24 should never go without lens covers. They're too important for protection. Get the eye lens cover with NSN 6650-01-433-3048 and the objective lens covers with NSN 6650-01-433-3056.

Neat 'n' Clean


Wipe the outside of your M24 with a lint-free cloth, NSN 8305-00-267-3015, to remove dust. Use a cloth dampened with soap and water to get rid of grease, oil and fingerprints.

Afterwards, dry the binoculars with another lint-free cloth.



LENS CLEANING IS A BIT TRICKIER. YOU NEED A GENTLE TOUCH. DO IT LIKE THIS...

- Softly blow away dust and dirt.
- Use lens tissue, NSN 6640-00-663-0832, like a little broom to sweep off the lens. Just don't rub. That will scratch the glass.
- Blow on the lens again.
- Moisten a clean piece of lens tissue with water or glass cleaner. Gently wipe the lens.
- Dry the lens with still another clean piece of lens paper.

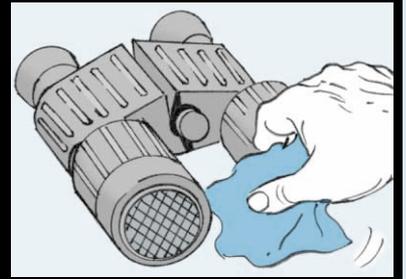

Anti-reflection Device

The glint from your lenses can give away your position. Remain undetected by using an anti-reflection device (ARD) with your M24 to get rid of glint. NSN 6650-01-456-6516 gets you the ARD, a carrying bag and instructions.



THERE HE IS!

OOPS!