


CANTEEN CARE & PARTS

You won't find a parts list for the 1-qt plastic canteen in any TM. So we've listed them for you. Now you have no excuse for ditching a canteen just because it's missing a cap or a cover.

NSN 8465-01-115-0026 brings you a canteen with the M1 chemical protective cap. And here are the replacement parts:

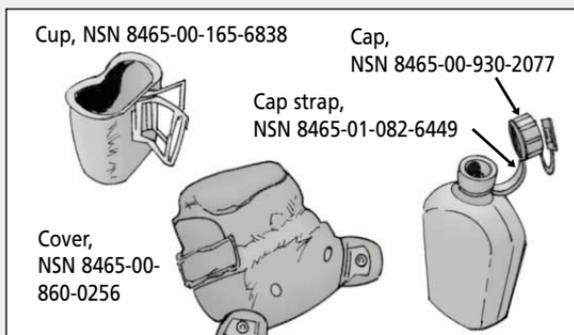

Take a Stand

One other item you might find useful is a canteen cup stand, NSN 8465-01-250-3632. The stand lets you use your cup to heat water for coffee or MREs. It fits inside the canteen cover, with the cup and canteen.

Strap the Cover

If the strap holding the flip-up cover on the chemical protective cap breaks off, you could lose the cover and spring a leak. But you can make a stronger strap out of 10 inches of nylon cord, NSN 4020-00-262-2019. Here's how:

- Cut off the broken plastic strap.
- Drill a 1/8-in hole 1/4 inch from the edge of the cover.
- Run the cord through the hole and knot it.
- Tie the other end around the cap strap.
- Melt both knots with a match or lighter. Smash them flat with a flat tip screwdriver or your knife blade. That'll keep them from unraveling.

