

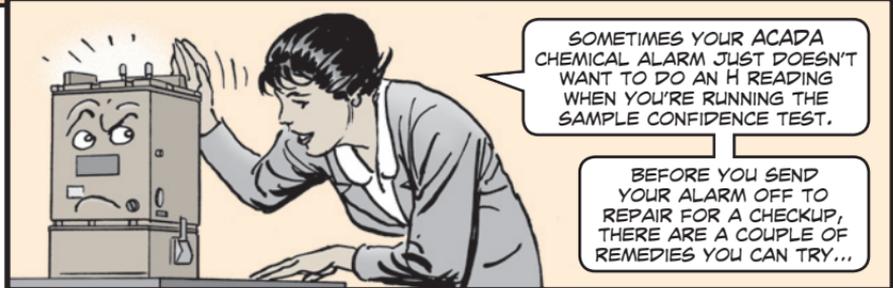
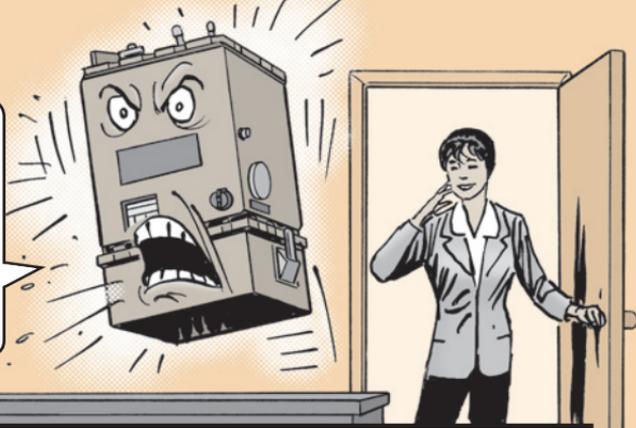


**WHAT  
THE  
H!?**

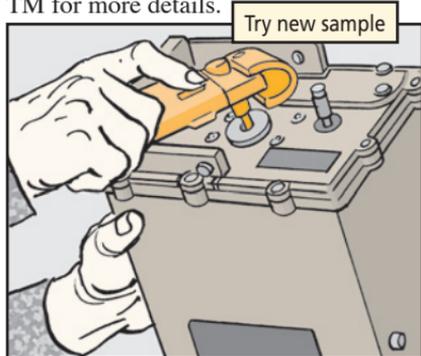

• Just because the green sample light comes on doesn't mean your ACADA is immediately ready to do an H reading. It's a good idea to wait five minutes after the light comes on before you do the H test. For more info, see Page 2-37 in TM 3-6665-321-12&P.

• If that doesn't do the trick, try taking an H reading with a new sample. The new sample sometimes kicks a sluggish ACADA into gear. See Page 2-38 in the TM for more details.

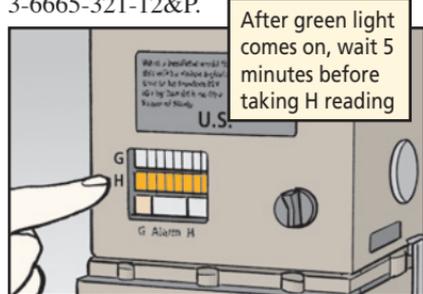

If neither remedy works, then it's time for a trip to repair.

Remember, be very, very quick when doing the sample confidence test: no more than one second for H and no more than a quarter second for G. If you leave the sample on longer, the ACADA is saturated and it must be run until it clears.