


PATIENT CARE REMINDER


MRAP users, contact between the patient and the litter support arms can cause further injury during transport on the MaxxPro Plus ambulance. To prevent this:

- Pre-load and secure empty litters in the litter berths

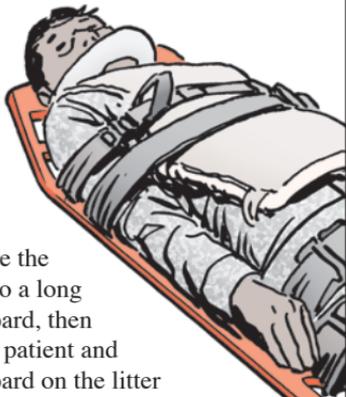

- Secure the patient to a long spine board, then load the patient and spine board on the litter

- Secure the spine board to the litter using litter straps or similar strength straps

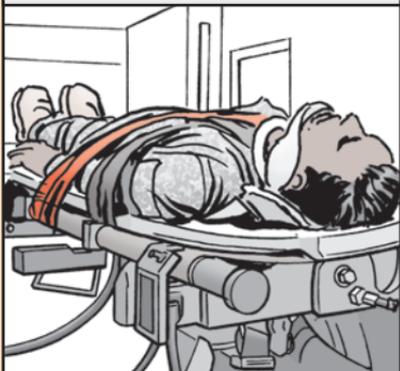

CS-563D Vibratory Roller...

Battery Disconnect Switch


Batteries are known to run down on self-propelled vibratory rollers.

So-o-o-o, after the day's run, make sure you turn off the battery disconnect switch that's located behind the curbside engine access door. If you **don't**, the batteries will lose their charge within three to five days! No juice means your roller needs a slave start—or you won't go anywhere!

BATTERIES ON THIS VIBRATORY ROLLER CAN DRAIN AND LOSE THEIR CHARGE WITHIN 3 TO 5 DAYS!



Battery disconnect switch in "OFF" position?

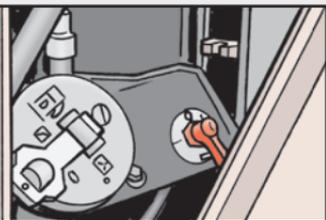

You'll find this kindly PMCS reminder in Step 17 on Page 2-15 of TM 5-3895-363-10.