


JCAD is Coming



THE M4 JCAD (JOINT CHEMICAL AGENT DETECTOR) WILL SOON BE REPLACING THE M22 ACADA.

I HAVE SOME ADVANTAGES OVER THE ACADA...

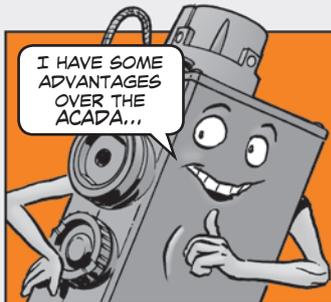


- JCAD detects not only nerve and blister agents, but also blood agents, which the ACADA couldn't do.
- JCAD has no radiation source, so you won't have to worry about wipe tests or special disposal.
- JCAD is a fraction of the size of the ACADA and can actually be attached to your uniform.

HELP YOUR NEW JCAD DO ITS DETECTING BY FOCUSING ON THESE TIPS...



- Make sure the batteries are strong and inserted like it shows on the battery tray. Weak batteries will cause JCAD to not operate properly.


If the detector takes longer than 20 minutes to become operational, replace the batteries. If the JCAD is still not working after another 20 minutes, then put in a new sieve pack.

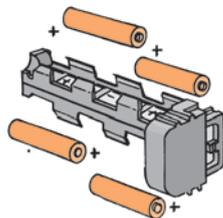


- Do not open new sieve packs until you're ready to use them.



- Ensure the detector has a new operational sieve pack (white) and not the yellow factory sieve pack containing charcoal.
- Store the confidence sample in the confidence sample pot after use. This helps the confidence sample last longer.

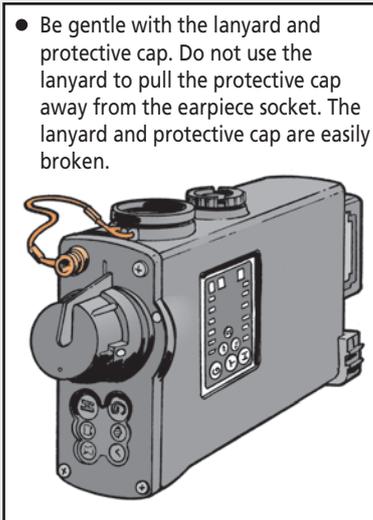

- Be gentle with the lanyard and protective cap. Do not use the lanyard to pull the protective cap away from the earpiece socket. The lanyard and protective cap are easily broken.
- Store the JCAD with the sieve pack in it. Failure to do so may result in contamination of the JCAD. Remove the batteries for storage and store them separately. This keeps the batteries from leaking and damaging the JCAD.

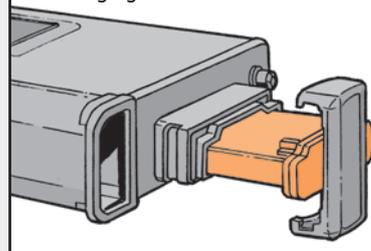

Need CBRN Help? Call CBRN-IRC!

HELLO, CBRN-IRC, I'VE GOT A FILTER PROBLEM...

...AND I HEARD YOU'RE THE GUYS TO GO TO.



YOU'VE COME TO THE RIGHT PLACE, MR. M4O.

If you have a question about any CBRN item or program, your first call should be to the CBRN-Information Resource Center (IRC).

CBRN-IRC has been designated the single point of entry for all CBRN questions by the Joint Program Executive Office for Chemical and Biological Defense (JPEO-CBD). Its staff is on-call 24/7.

To contact CBRN-IRC, email: cbnrn.irc@us.army.mil

This is a new email address for them. You can also call (309) 782-7349, DSN 793-7349, or toll-free (800) 831-4408. In Germany, call 0130810280 and in South Korea, call 0078-14-800-0335.