


# Store MSK Legs *Before* Travel

THE MORTAR STOWAGE KIT (MSK) FOR THE M120/M121 MORTAR HAS GUIDE RAIL LEGS THAT EXTEND TOWARD THE GROUND TO GUIDE THE MORTAR DURING EMPLACEMENT.

UNFORTUNATELY, THE LEGS ARE OFTEN DAMAGED WHEN THE MSK IS SHIPPED OR TOWED... AND REPLACEMENTS ARE EXPENSIVE AND HARD TO GET.

ANY TIME YOU'RE GOING TO SHIP OR TRANSPORT THE MSK, FIRST REMOVE THE GUIDE RAIL LEGS AND PUT THEM IN THE BII BOX.

OTHERWISE, YOUR MSK SOON WON'T HAVE ANY LEGS TO STAND ON.

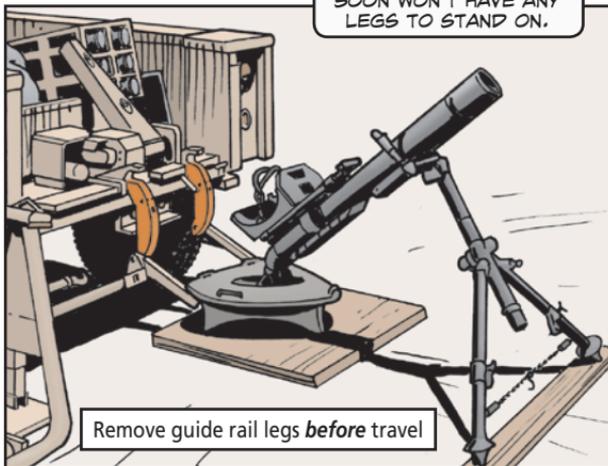

## Collective Protection Equipment...

# COMPARTMENT CONTROL MODULE CHANGING BUTTONS

The HORN OFF button for the compartment control module that's part of the CHEMBIO collective protection equipment is going away. The collective protective equipment is used with systems like the Patriot and TACFIRE artillery protective entrances.

So when you order a new compartment control module, NSN 4240-01-057-3378, it will come without a HORN OFF button. Instead the module will have an e-switch push button that's connected to a small PC board on the rear of the front panel. The Army hasn't decided if this fix is permanent. But for at least the time being, look for the e-switch.

HORN OFF button...



HORN OFF



ENTRANCE



...is being replaced by e-switch

