


# NEW SIEVE PACK? RESET!



WHADAYA  
MEAN YOU  
DON'T HAVE  
TIME TO RESET  
MY TIMER?

DIDN'T  
YOU JUST  
REPLACE  
MY SIEVE  
PACK?!

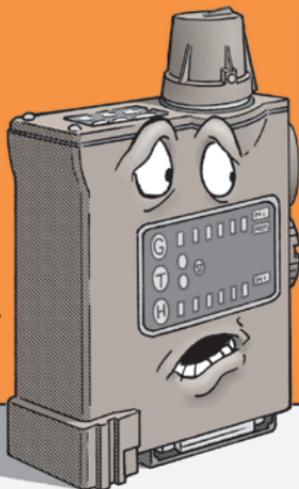


Dear Editor,

I've noticed when I evaluate CBRN equipment at JBLM that many M4 joint chemical agent detector (JCAD) operators don't realize the importance of resetting the sieve pack timer after replacing the sieve pack to prevent detecting problems.

Here's how:


1. **Make sure the detector is turned off.**
2. **Press and hold the control button while turning the rain cap counterclockwise to ON. The sieve pack icon will start to flash rapidly.**
3. **Release the control button.**
4. **Within 1-2 seconds, press and release the control button again. The timer is now reset.**
5. **Do the confidence check in WP 0006 in TM 3-6665-355-10 to make sure the JCAD is ready for operation.**

David Whitmire  
COMET

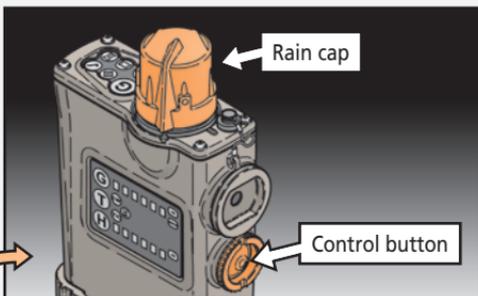

### Editor's note:

*Another great tip from you, David!  
It's also a good idea to make sure the sieve pack is installed in the fully closed position when storing the M4 JCAD. This keeps the sieve pack in good condition and makes sure JCAD starts properly the next time you power it up.*

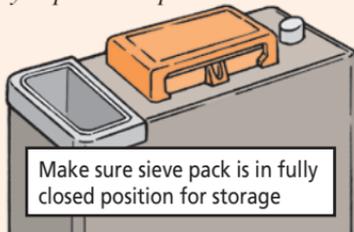

Make sure sieve pack is in fully closed position for storage