

IF YOU'RE NOT CAREFUL WHEN YOU PUT ON THE M52 MASK, THE INSIDE FLAP OF THE NOSE CUP CAN STICK TO ITSELF.

THAT LETS CARBON DIOXIDE BUILD UP INSIDE THE MASK AND YOU GET VERY *DIZZY*.

# NOSE CUP FLAP FLAP




HERE'S THE CORRECT WAY TO PUT ON THE MASK AND AVOID THE FLAP FLAP...

- Remove all necklaces and chains. Unbutton your shirt collar if it interferes with the hood sealing around your neck.
- Remove the M52 from its pouch and remove its outer bag by tearing at the notch.
- Open the inner vacuum bag at its tear notch and remove the M52. If the protective padding sticks to the front of the filter housing, pull it off and throw it away.

- Unfold the hood so that the black rubber neck dam and nose cup are facing you. The nose cup should slip into the hood. If it doesn't, push it into the hood. If the nose cup remains folded, unfold it to its correct position.

- Turn the visor toward you, placing the rubber neck dam under your chin. Then pull the neck dam up and over your head in a single fluid motion.

- Push long hair under the neck dam and away from the sealing surface. Hold the front of the filter with one hand and position the bottom of the nose cup as low as possible under your chin. Make sure the top of the nose cup is positioned on the bridge of your nose. If you wear glasses, position the nose cup just below them.

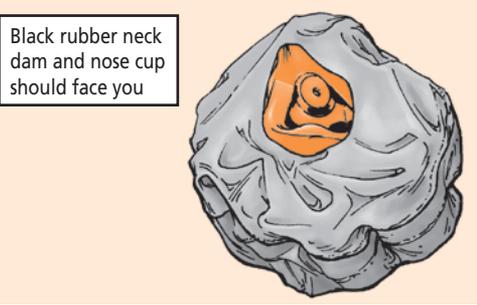

- Hold the filter and smooth the top of the hood across the top of your head. Position the visor close to your eyes to give the best possible view.
- Squeeze the hood with both hands so that the nose cup is moved slightly away from your face. This removes excess air trapped inside the hood. You may need to do this several times to get rid of as much of the air as possible.

- Adjust the strap tension so the nose cup is snug on your face. Hold the filter with your left hand while pulling the right-hand strap straight back to tighten the strap. Do the opposite to tighten the left-hand strap.

If you need to loosen the straps, pull forward on the backside of the buckles. If the nose cup is uncomfortable or collapses on your face, the straps are too tight.



- Shake your head gently side-to-side. If the nose cup moves out of place, tighten the straps. If the hood inflates and deflates when you breathe, you need to reposition the nose cup and tighten the straps.

